



# FITTING INSTRUCTIONS


KIA Tasman

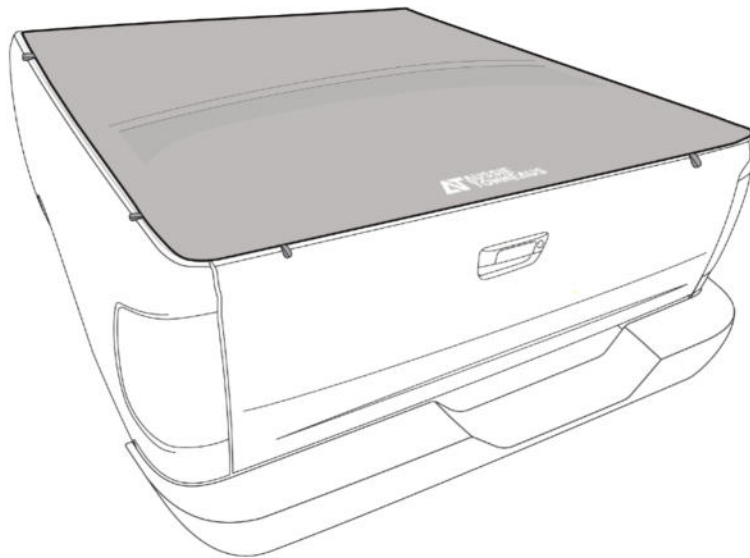

## Tools Required

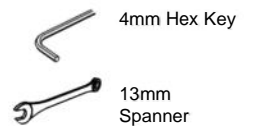

## In the Box

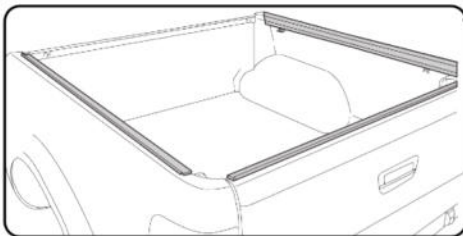

Tonneau Cover



Tailgate Rail



Side Rails



Support Bars






Clamps




Bolts

# 1. Attach the Side Aluminium Rails

## Clamp Assembly

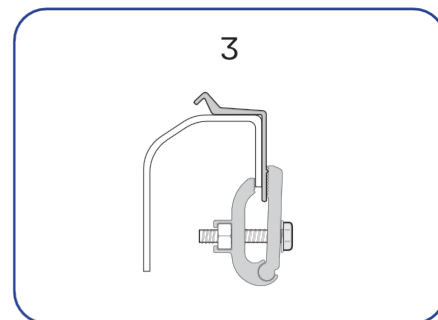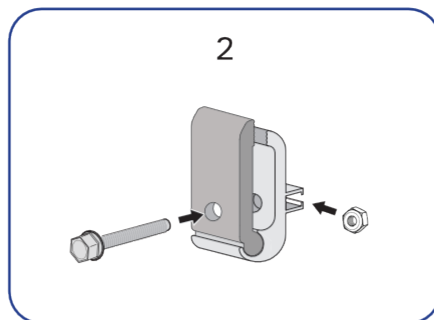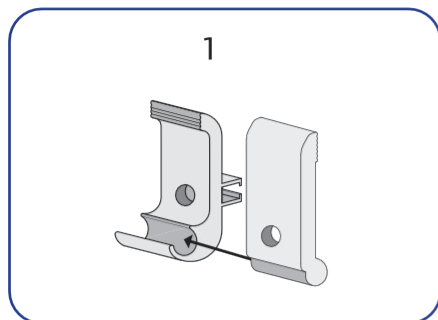


## Clamp Positions

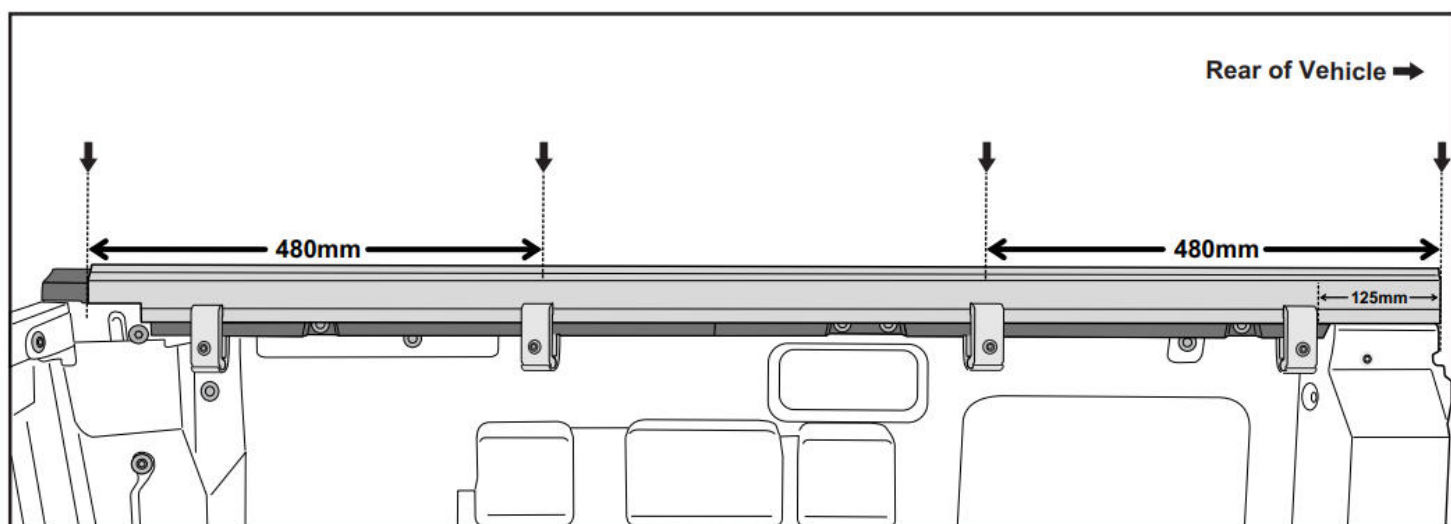


## 2. Attach Support Bars

- 2.1** Fit the 2 curved support bars onto the 2 centre clamps. Diagram shows one support bar for illustration.

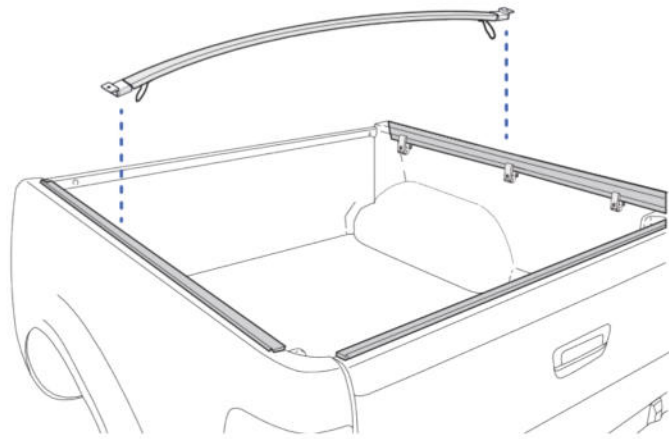


- 2.2** Wrap bunji cord around the clamps. This is to prevent support bars coming off.

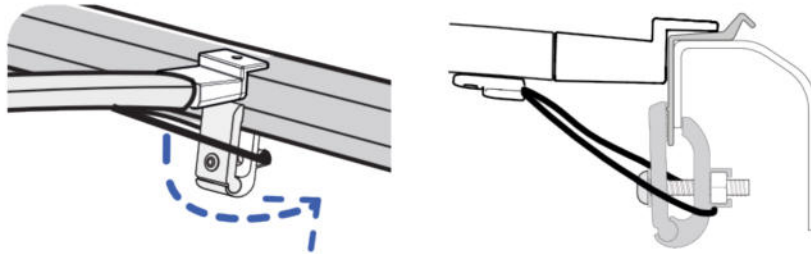


## 3. Prepare Tailgate

Unscrew the 4 screws along the top of the tailgate.

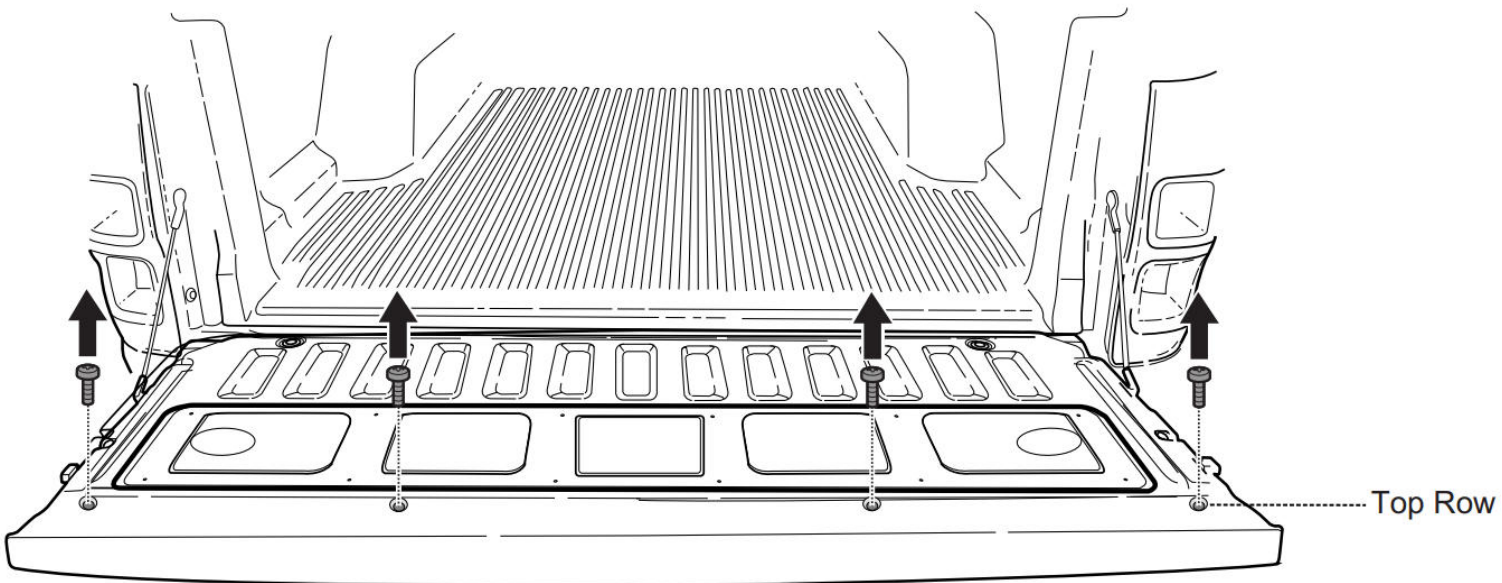

## 4. Attaching Tailgate Rail


Use the supplied Stainless Steel M8 Bolts and Washers to secure the Tailgate Rail to the Tailgate.

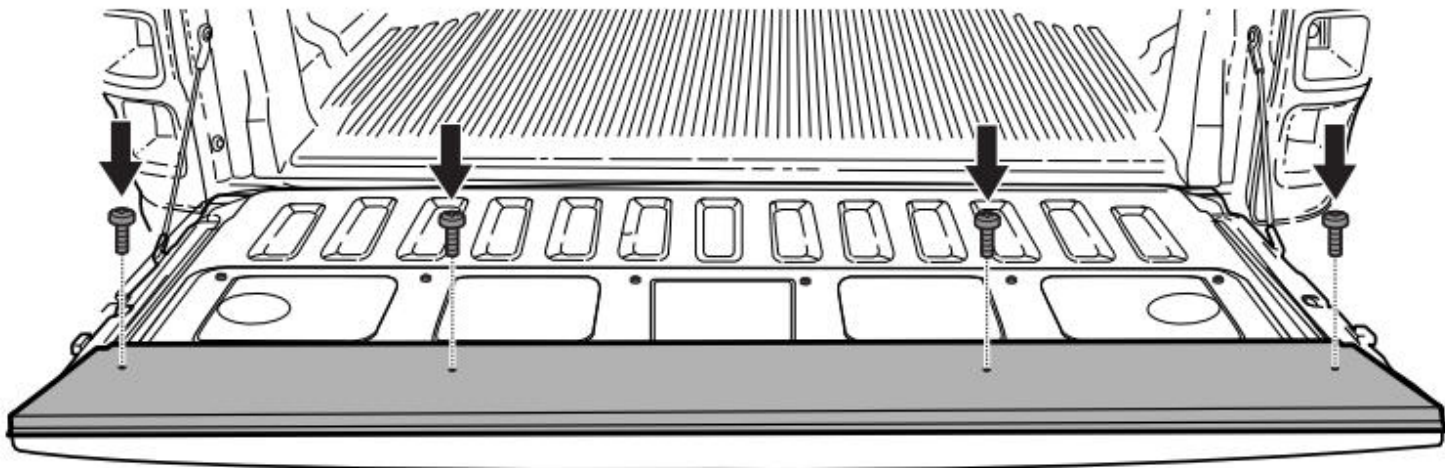


## 5. Fitting the cover

5.1. Attach the front of the cover to the front lip of the car.


5.2. Engage the back of the cover first, followed by the sides using the pull tabs (3).

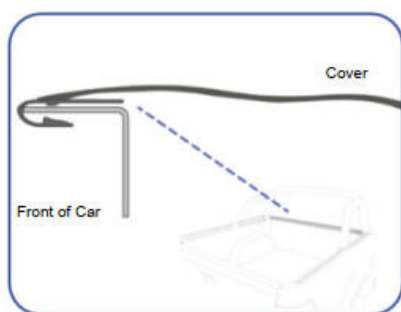

1

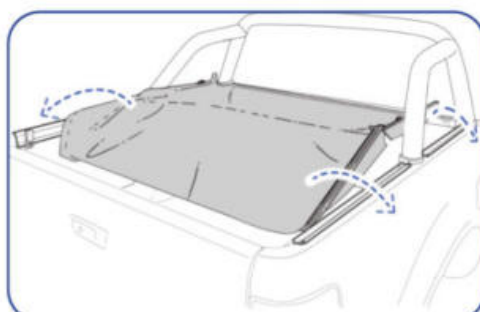

2

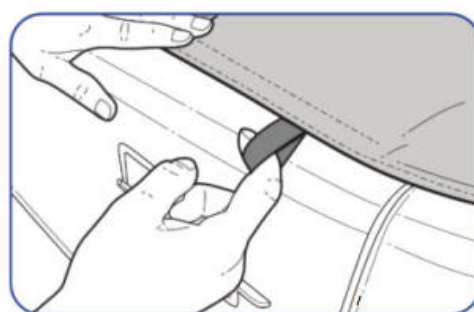

3