




EZYROLL COVER INSTALLATION GUIDE

— PARTS SUPPLIED

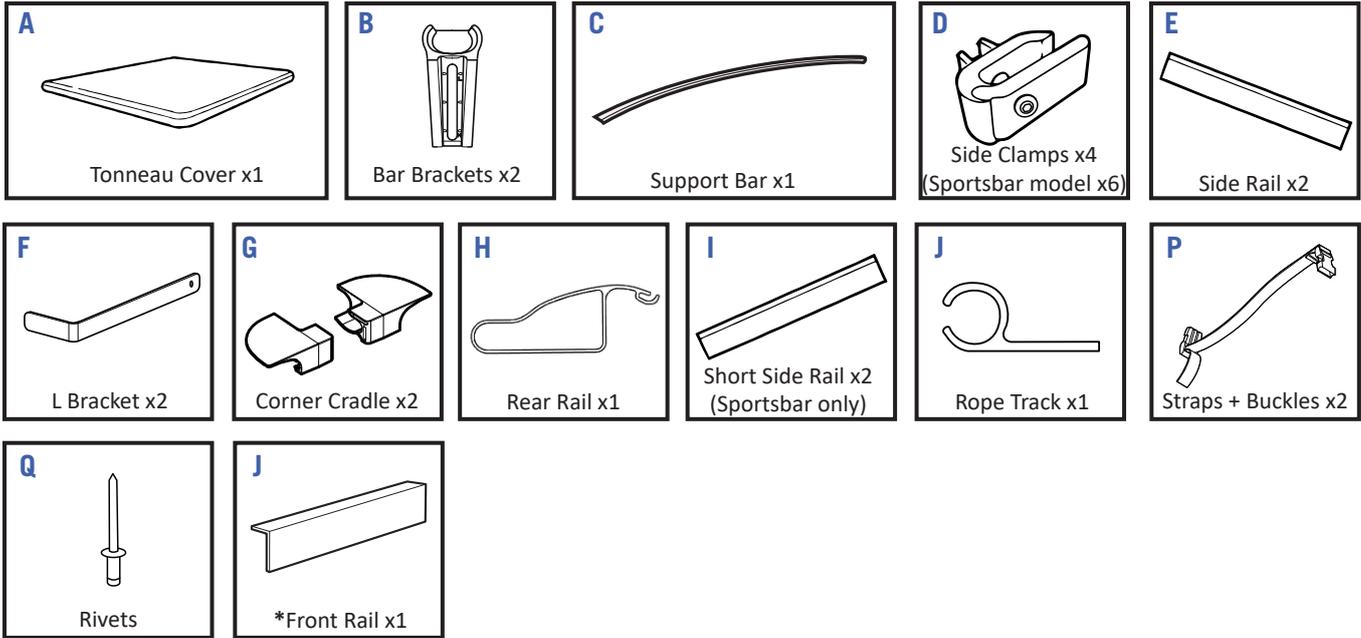


* Only for Nissan Navara NP300/D23 (2021-Current)

— SAFETY NOTES

- Ensure that appropriate Personal Protective Equipment is used during the installation process.
- During the accessory fitment, ensure all Australian automotive and dealership safety practices are followed.
- Always refer to the vehicle's workshop manual when removing factory components (sports bars, headboards etc)
- To prevent damage to the fasteners do not use a powered drill to screw the bolts. Always do this with hand tools.
- Remove the support bar while driving with the cover rolled up.

— FINAL ASSEMBLY

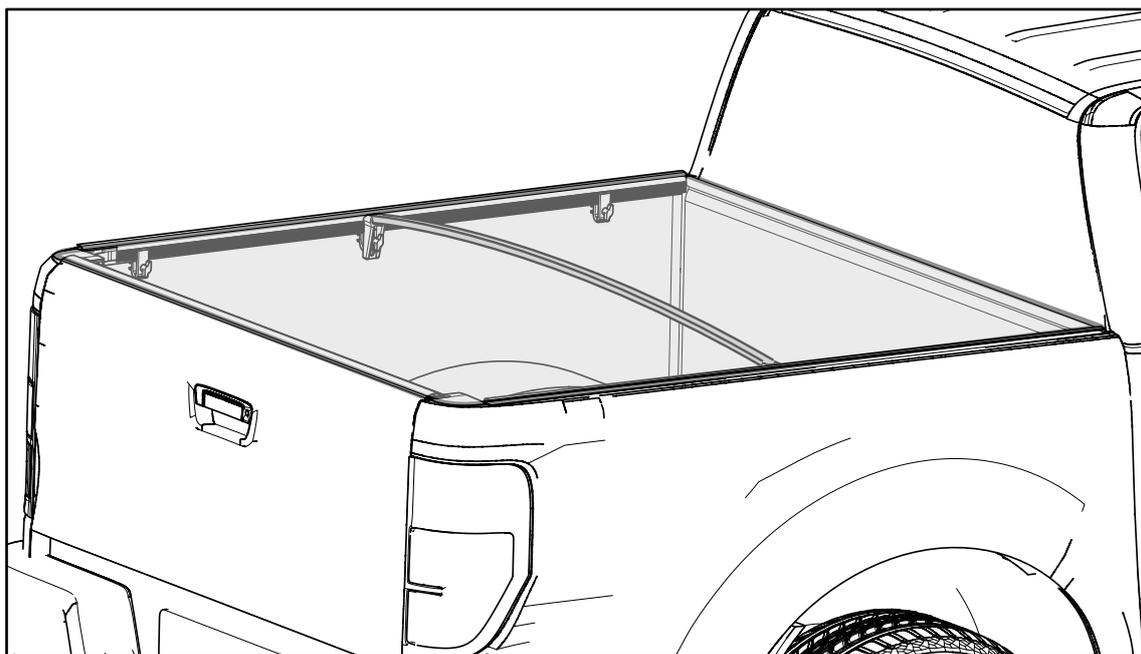


1

ATTACH THE FRONT ROPE TRACK


Align the Rope track to the front edge of the front rail, closest to the cab side. Mark and drill 5 evenly spaced holes through the Rope track and into the Front rail.

For the 2021 to Current Nissan Navara NP300/D23, see appendix before completing this part of the installation process.

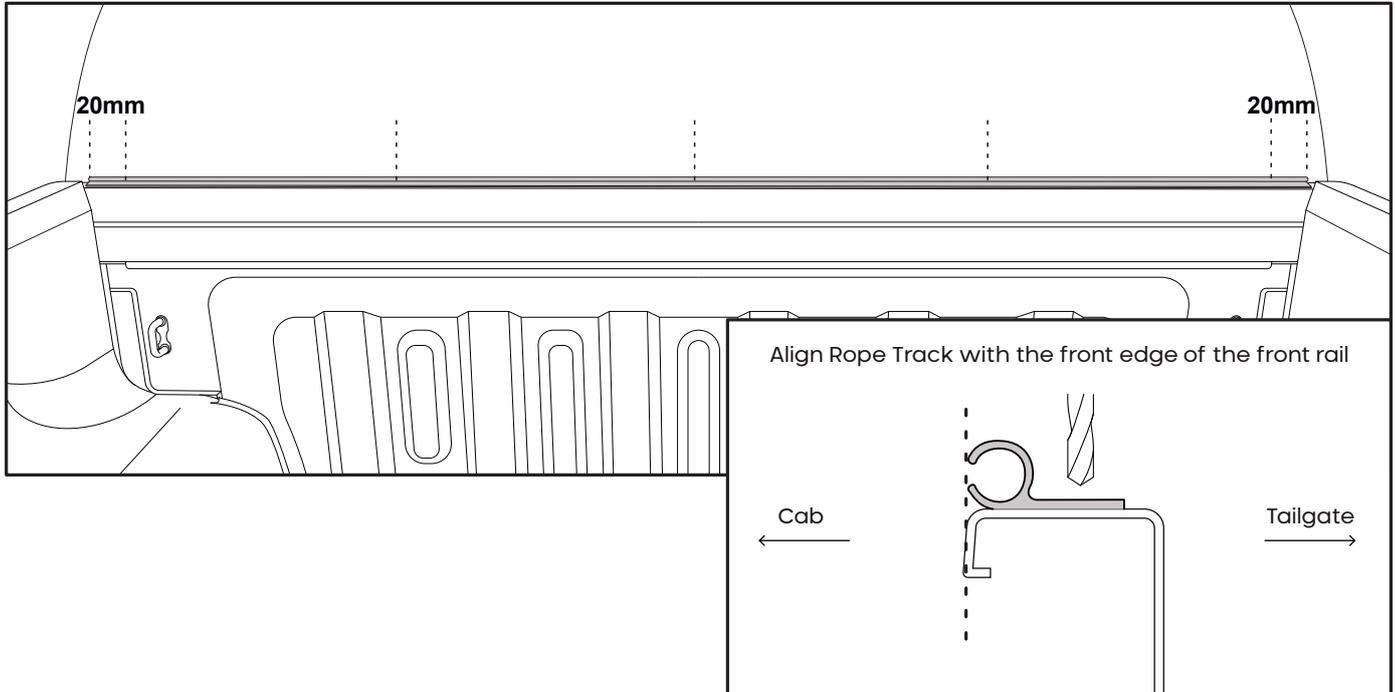



Place the Buckle straps as illustrated below with the female buckle half at the top and so that the strap is sandwiched between the top edge of the bed and the Rope Track.

Apply Silicone to underside of Rope Track and rivet into place through the holes drilled previously.


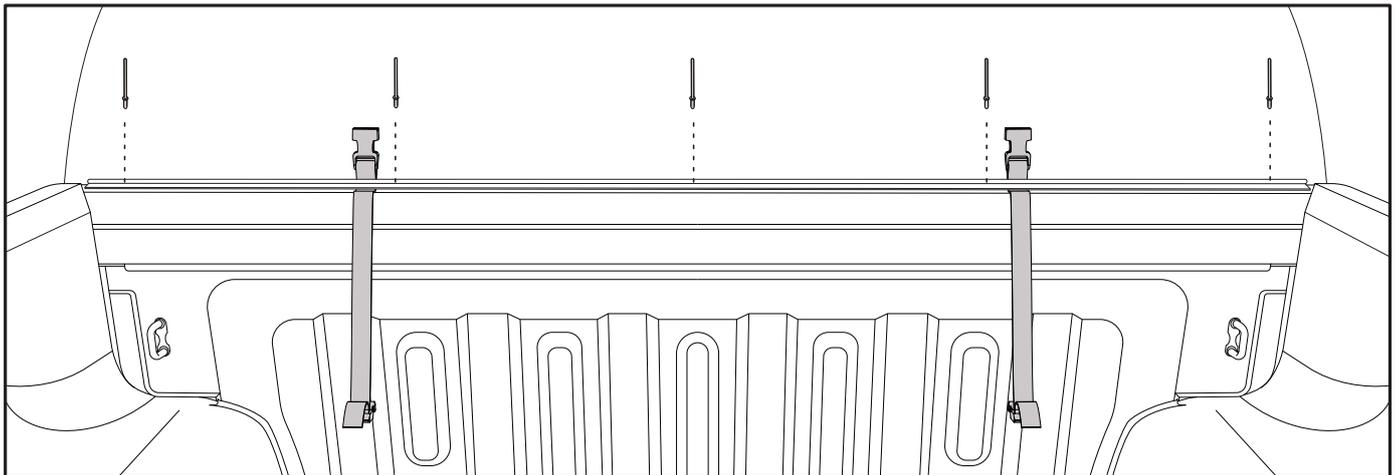


2 ASSEMBLE THE CRADLES

Insert the L bracket into the cradle. Then slightly tighten the thumb screw to keep it in place. This will need to be adjusted during installation to the vehicle). Repeat for other set and put aside for now.

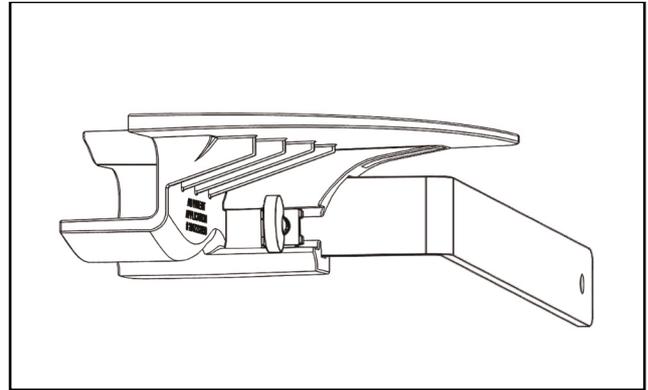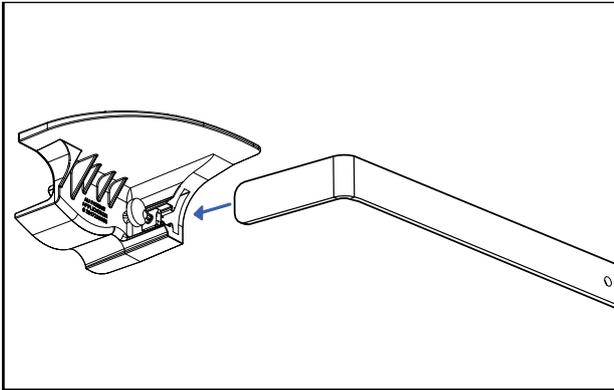

3 ATTACH THE SIDE RAILS

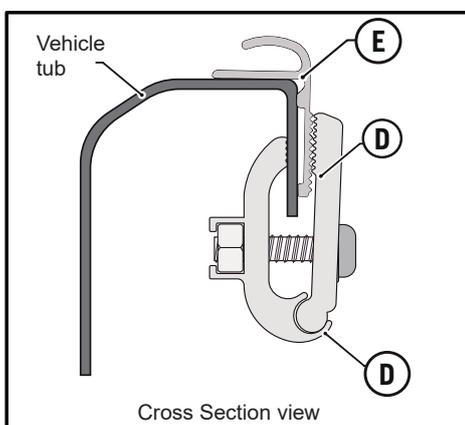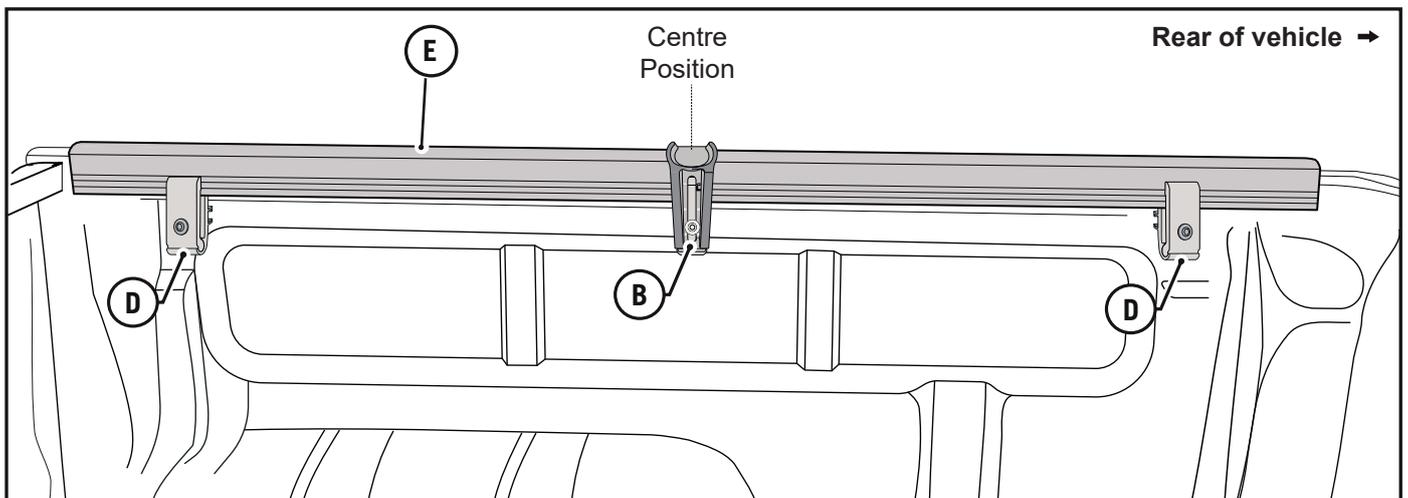

Position the aluminium side rail on either side of the tub and install each clamp according to the dimensions listed on the next page depending on your vehicle configuration.

Important






The side clamp **D** needs to engage with at least 2 teeth to ensure a secure fit



3

ATTACH THE SIDE RAILS - CONTINUED

Headboard or Non-Sport Bar Models

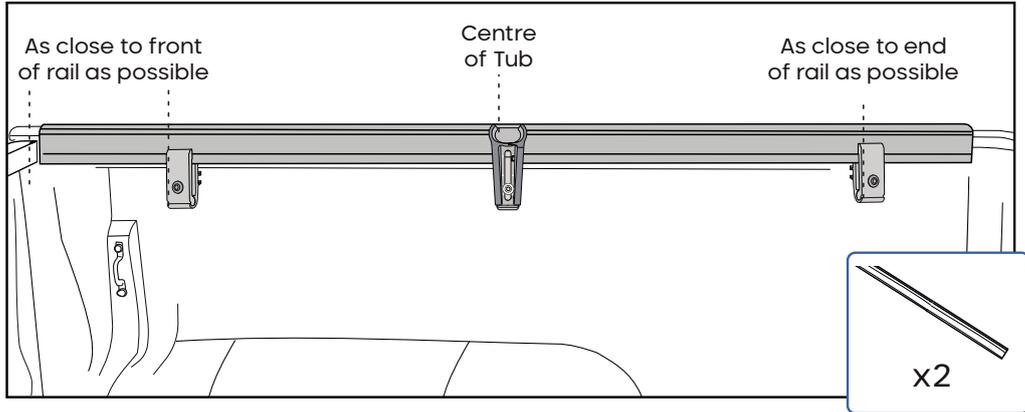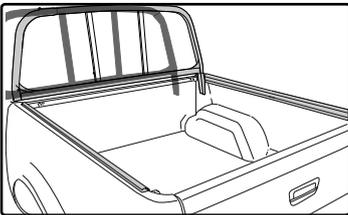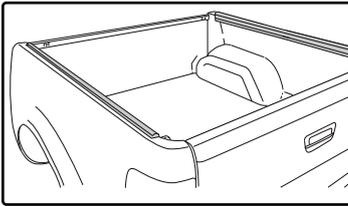

Sport Bar Models

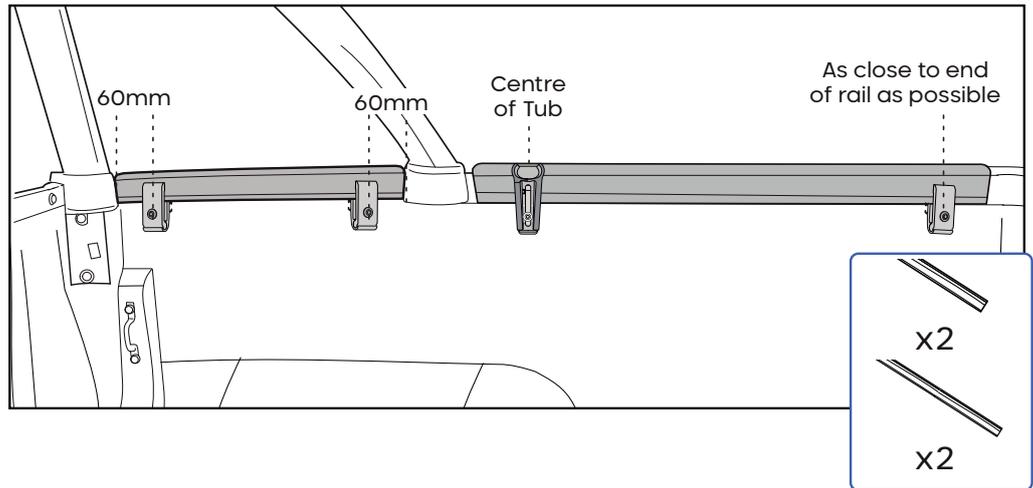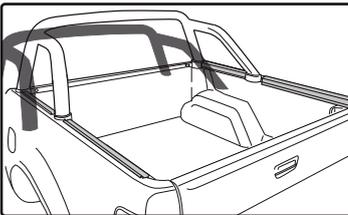

4


INSTALL THE CRADLES

Undo the Rear Clamp enough to fit the Cradle L-Bracket between the Side Rail and side wall of the bed. The two locating notches on the back face of the aluminium Side Rail should help to keep the bracket seated in position.

Tighten the Rear Clamps just enough to still allow the bracket to move freely without falling out.

Complete this for the other side.


IMPORTANT: If your tub has a plastic liner, you may need to cut some away so that the Cradle L-Bracket sits flat against the metal of the tub.

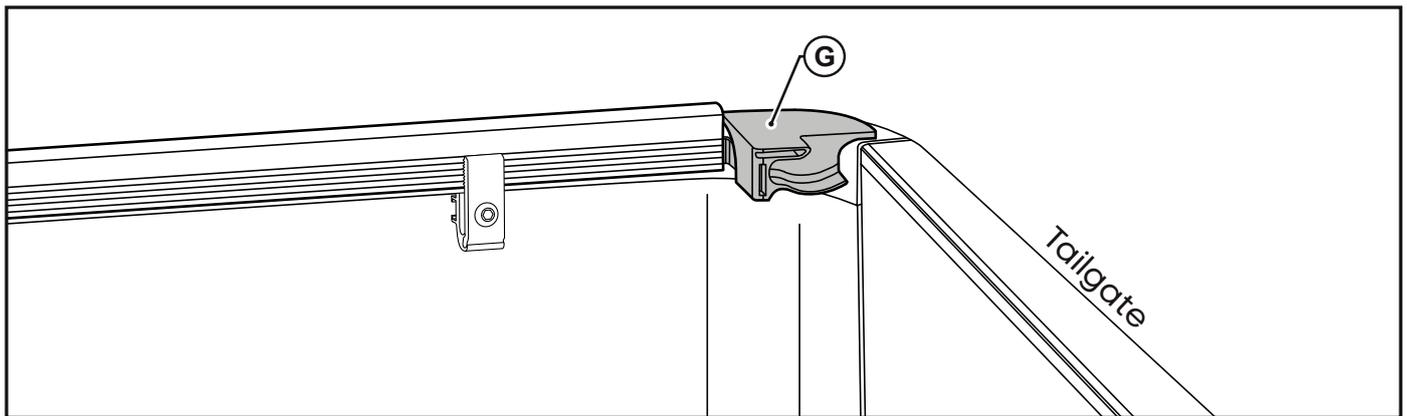

Install the Rear Rail into both cradles. You may need to adjust with the Cradle's thumbscrews to get the rail fully seated.

Ensure the Cradles and Rear Rail are pushed as far back as possible so that the vertical face of the Rear Rail is making contact with the tailgate.

Now fully tighten the Rear Clamps once more to lock the cradle in position.

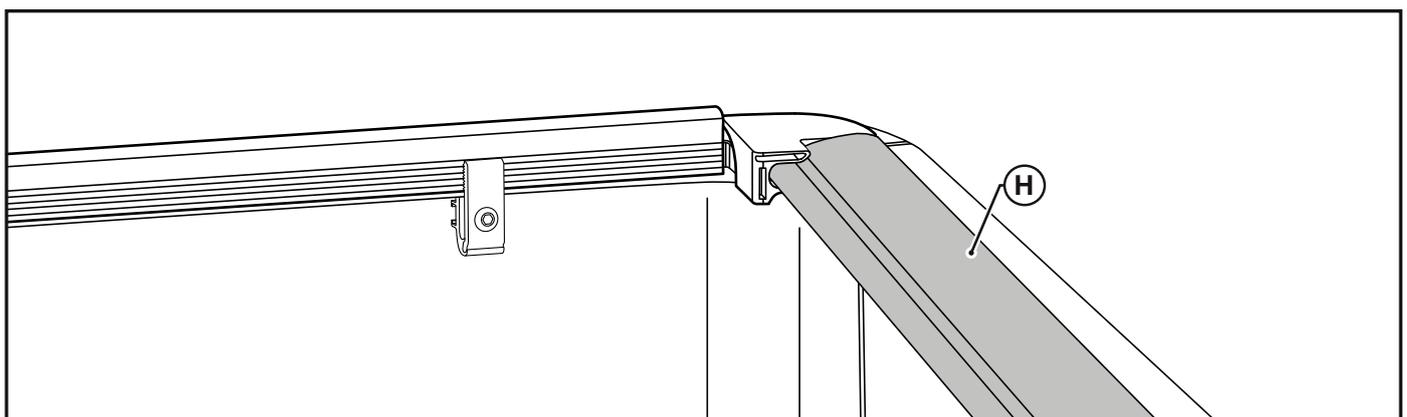

5 FIT THE COVER



Install the support bar into the clamped bar brackets by engaging each end of the bar into the bar brackets and rotating in.

Slide the cover into the Rope Track at the front of the tub.

Engage the sewn-in plastics into the side rails, starting from the front of the vehicle and working to the rear.

Remove the Rear Rail from the Cradles by opening the tailgate and slide track of the Rear Rail onto the sewn-in plastic strip at the rear end of the cover.

With the tailgate still open, reengage the Rear Rail into the corner cradles by rotating downward. Adjust the tension as needed.

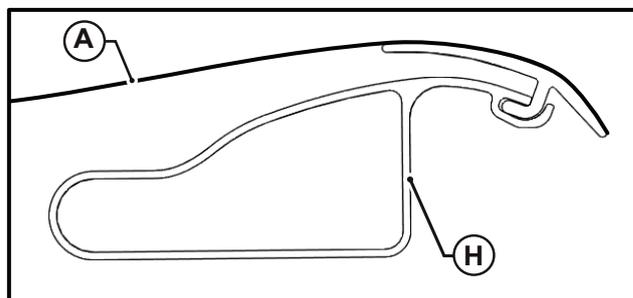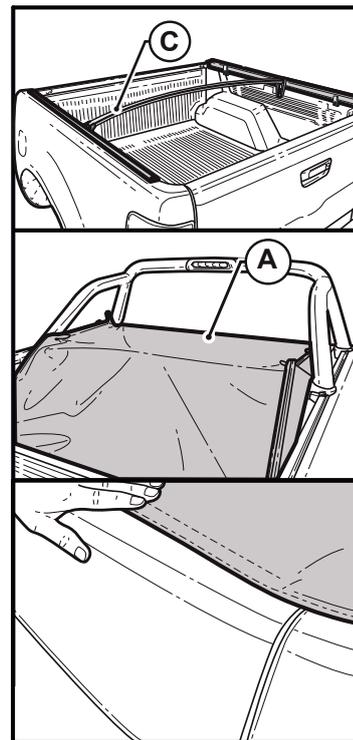

ADJUSTING THE TENSION:

To adjust the tension of the cover, you must adjust the height of the support bar. To do this, simply loosen the bolt which goes through the Bar Bracket (B) and Clamp (D) then move the bracket either up or down until the bolt is at your desired level. Re-tighten the bolt.

“L” lowers the height and loosens the cover.

“H” increases the height and tightens the cover.

CONGRATULATIONS!
YOU HAVE SUCCESSFULLY INSTALLED YOUR
TONNEAU COVER


APPENDIX.

Nissan Navara NP300/D23 (2021 to Current)

- Front Rail Installation

On the Front Rail, measure and then drill two points using a 4mm drill bit 30mm from each end and 15mm up from the bottom edge.


Measure and drill the remaining four points spaced evenly between the first two points.

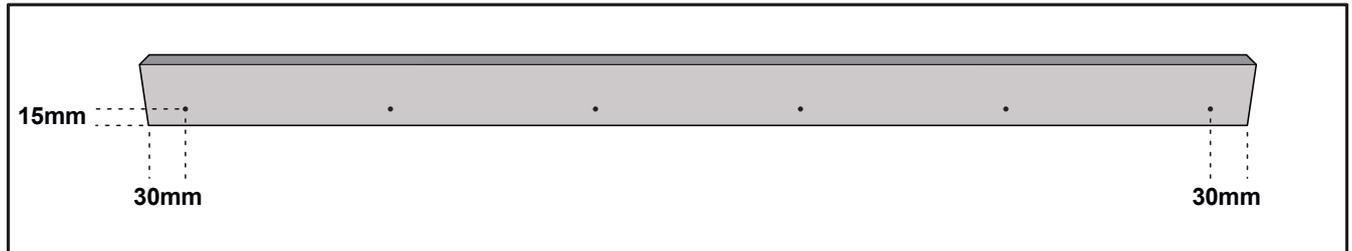

Place the Front Rail at the front of the tub so that the top edge of the rail is at the same height at the top edge of the tub sides.

Drill through each of the 6 drilled holes into the tub.

Apply silicone sealant to the back side of the rail and using the provided rivets, rivet the aluminium rail in place.

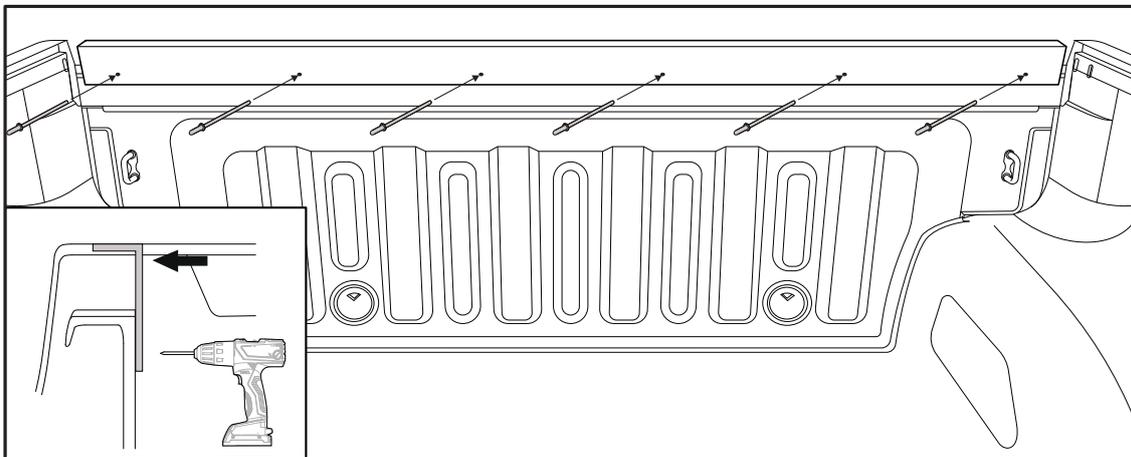

Continue with the rest of the installation from Step 1 by attaching the Rope Track on top of this Front Rail.