

# TONNEAU COVER FITTING INSTRUCTION

## Toyota Hilux Extra Cab 1998 – March 2005

**Part Number: ATB01129**

### 1. TONNEAU COVER FITTING

**NOTE:** Read entire instructions prior to start.

#### 1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Tape Measure, Rivet Gun, Marking Pencil / Pen, Clear Silicone / Silicone Gun

#### 1.2 CONTENTS

1 x Tonneau Cover	2 x Bar Brackets (300474)
3 x Aluminium Rope Track- 484mm long ea.	16 x Rope Buttons (400473)
1 x Tonneau Support Bar – (300516)	27 Rivets – (300482)
4 x Dowel	


#### 1.3 TONNEAU COVER INSTALLATION PROCEDURE

**NOTE:** Read entire instructions prior to start.

1. Using two pieces of dowel, join the 3 aluminum rope tracks together. Place the other 2 pieces of dowel in the ends of the now joined rope track.
2. Rest the aluminum rope track on the side rails as Shown in **Figure 1**, and push forward to the vertical face of the tub.
3. Using a 4 mm drill bit, drill 6 holes 50mm from the end of each of the aluminum rope tracks into the front of tub.
4. Once all the holes have been drilled, remove the dowelling pieces. Squeeze silicon along the back of the rope tracks and pop rivet into place.
5. To fit bar brackets measure 928mm back from the inside front edge at the top of the tub and place them as shown in **Figure 2**. (5mm down from top edge of tub). Drill and rivet using two large rivets for each Bar Bracket. Install support bar according to supplied instructions.
6. To fit round body hooks measure 115mm down from the top edge and line up each hook individually to each bunji loop starting with the two either side of the tailgate handle and working your way around to the front, drill and rivet buttons alternating from side to side. **See Figure 3**


Insert a dowel [J] half way into each end of the rope track [E].

Ensuring the rounded section (1) of the rope track faces away the cabin, sit the rope track against the front (cabin end) inside vertical surface of the tub (2) & centralize the rope track.

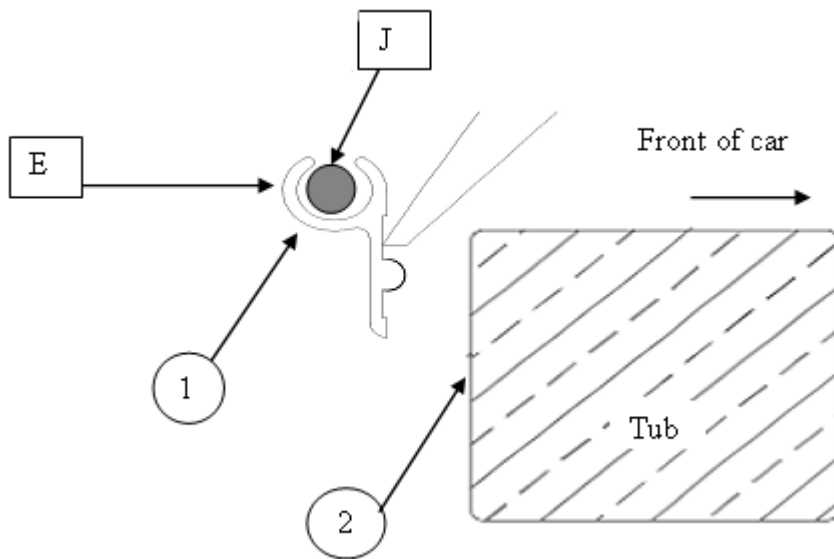

**Figure 1**


Placement of aluminium rope track. Ensure channel is above the tub's top edge.

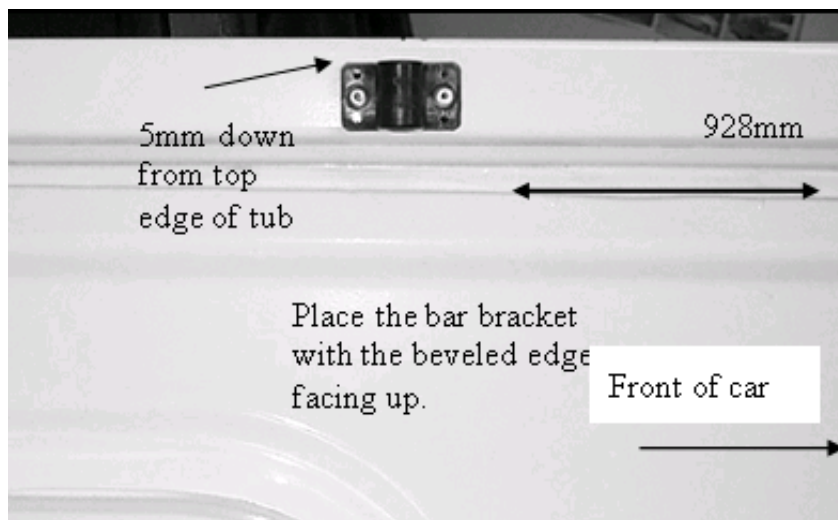

**Figure 2**

Placement of Bar Brackets.

Round body hooks are 115mm down from top edge

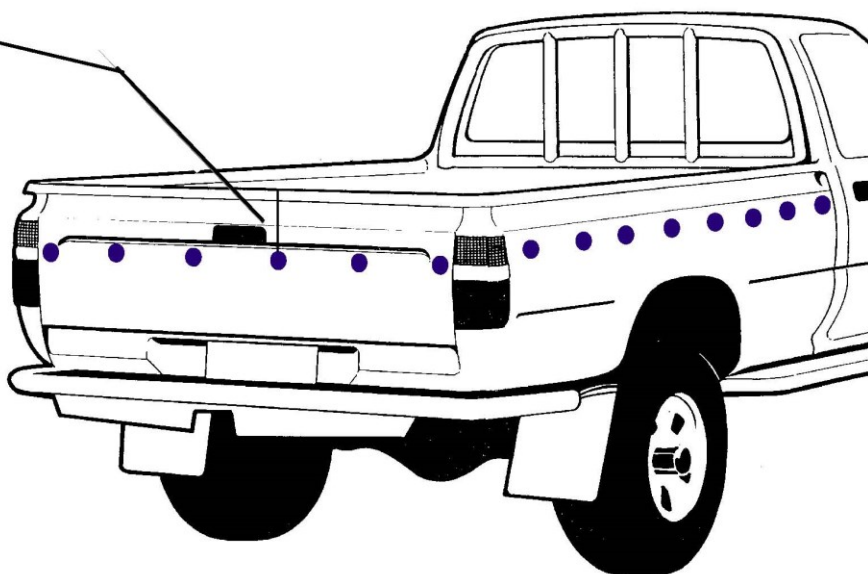

**Figure 3**

## 2. CARING FOR YOUR TONNEAU

Apply bee's wax or Dri-lube to stitching a few times a year, as this will maintain the tonneau's waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing brush to clean tonneau.

Never drive without tonneau support bars in place as flapping can cause a delaminating effect on the material.

"Tonneau is not designed to be used as a load restraint"

## 3. MULTI-FIT SUPPORT BAR

The Aussie Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru Brumbys to Cab Chassis aluminium trays.

### 3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

### 3.2 MULTI SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece

### 3.3 FITTING MULTI SUPPORT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. Make sure you do not over tighten the grub screws. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

## 4. WARRANTY AND FEED BACK

**Register now to activate your 3 year warranty by filling out our online form!**

QR Code:



Website Link:

<http://www.aussietonneaus.com.au/en-au/warranty-card-request-form.html>

**Please complete our 2 minute feedback section as we strive to constantly improve for our customers.**

**Thank you for purchasing an Aussie Tonneaus Product.**