

# TONNEAU COVER FITTING INSTRUCTION

## Volkswagen Amarok Dual Cab

### With Sport Bar

2011 – Current

Part Number: ATB01145

## 1. TONNEAU COVER FITTING

NOTE: Read entire instructions prior to start.

### 1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Tape Measure, Rivet Gun, Marking Pencil / Pen, Clear Silicone / Silicone Gun

### 1.2 CONTENTS

1 x Tonneau cover	2 x Aluminium rope track (702mm)
2 x Bar Brackets	1 x Tonneau support bar
18 x Buttons	34 x Large rivet
4 X Pieces of dowel	2 x Aluminium Angle 100mm

### 1.3 TONNEAU COVER INSTALLATION PROCEDURE

**Note:** To prevent corrosion apply an anti-corrosive primer to all holes drilled

**\*\*\*Ensure the spacing between sports bars is 664mm to 669mm. Adjust if required.\*\*\***

1. Using two pieces of dowel, join the 2 aluminium rope tracks together. Place the other 2 pieces of dowel in the ends of the now joined rope track.
2. Rest the aluminium rope track on the side rails as Shown in **Diagram A**, and push forward to the vertical face of the tub.
3. Using a 4.5 mm drill bit, drill 6 holes 50mm from the end of each of the aluminium rope tracks into the front of tub.
4. Once all the holes have been drilled, remove the dowelling pieces. Squeeze silicon along the back of the rope tracks and pop rivet into place.
5. To fit bar brackets measure 735mm back from the inside front edge at the top of the tub and place them as shown in **Diagram A**. (10mm down from top edge of tub). Drill and rivet using two large rivets for each Bar Bracket. Install support bar according to supplied instructions.
6. To fit round body hooks to the tailgate, measure 475mm up from the bottom of the tail gate and line up each hook individually to each bunji loop starting with the two either side of the tailgate handle and working your way out. Drill and rivet buttons alternating from side to side.

7. To fit round body hooks to the sides of the ute, measure 165mm down from the inside edge and line up each hook individually to each bunji loop starting with the two bunjis at the rear corners and working your way around to the front, drill and rivet buttons alternating from side to side. For the front buttons' distance are 30mm from the edge of front tub.

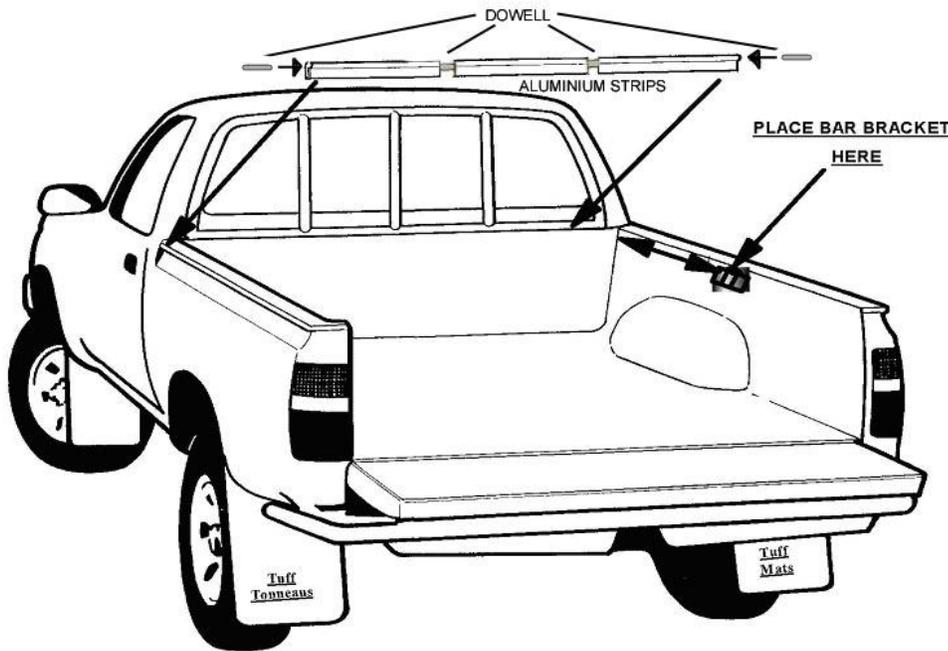


Diagram A

Round body hooks are placed here

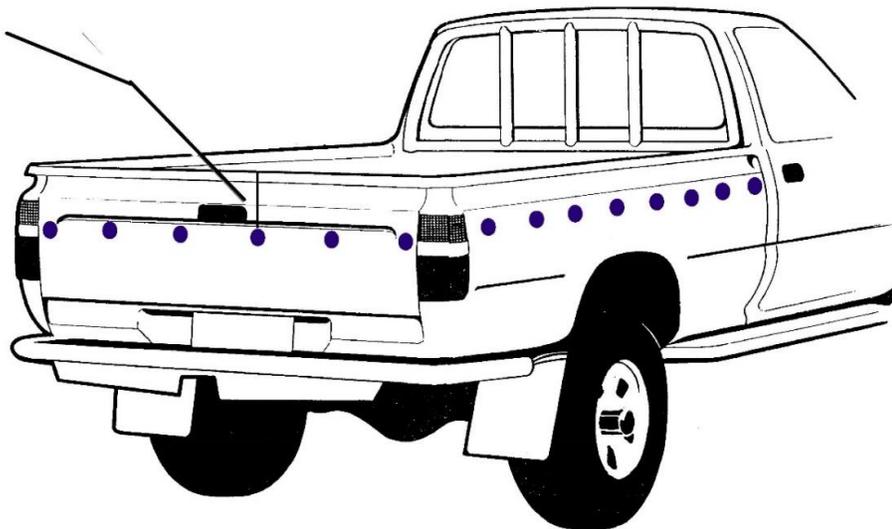


Diagram B

## 2. CARING FOR YOUR TONNEAU

Apply bee's wax or Dri-lube to stitching a few times a year, as this will maintain the tonneau's waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing brush to clean tonneau.

Never drive without tonneau support bars in place as flapping can cause a delaminating effect on the material.

"Tonneau is not designed to be used as a load restraint"

### 3. MULTI-FITT SUPPORT BAR

The Aussie Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Suburu Brumbys to Cab Chassis aluminium trays.

#### 3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

#### 3.2 MULTI SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece

#### 3.3 FITTING MULTI SUPPORT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. Make sure you do not over tighten the grub screws. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.