

TONNEAU COVER FITTING INSTRUCTION

Nissan Navara Dual Cab With Headboard, 1997 – 2001 Part Number: ATB01235

1. TONNEAU COVER FITTING

NOTE Read entire instructions prior to start.

1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen


1.2 CONTENTS

1 x Tonneau Cover	2 x Bar Brackets
1 x Tonneau Support Bar	22 x Long Rivets
1 x Fitting Instruction	16 x Rope Buttons
	4 x Short Rivet
	4 x Press Stud
	8 x LTD Posts

1.2 TONNEAU COVER INSTALLATION PROCEDURE

1. Place tonneau on the front of the tray as shown in **Diagram A**.
2. Drill through clips using a 3.2mm drill bit and screw in LTD posts as you go along, in the order shown in **Diagram A**.
3. To fit bar brackets measure 698mm back from the inside front edge at the top of the tub and place them as shown in **Diagram A**. (5mm down from top edge of tub). Drill and rivet using two large rivets for each Bar Bracket. Install support bar according to supplied instructions.
4. To fit round body hooks to car, pull tonneau tight and squeeze bunji loop together draw a mark at the bottom of bunji , this is the height to drill the holes for round body hooks (sides may be different height to the back). Line up each hook individually to each bunji loop starting with the two either side of the tail gate handle and working your way around to the front, drill and rivet body hooks alternating from side to side.

Diagram A.

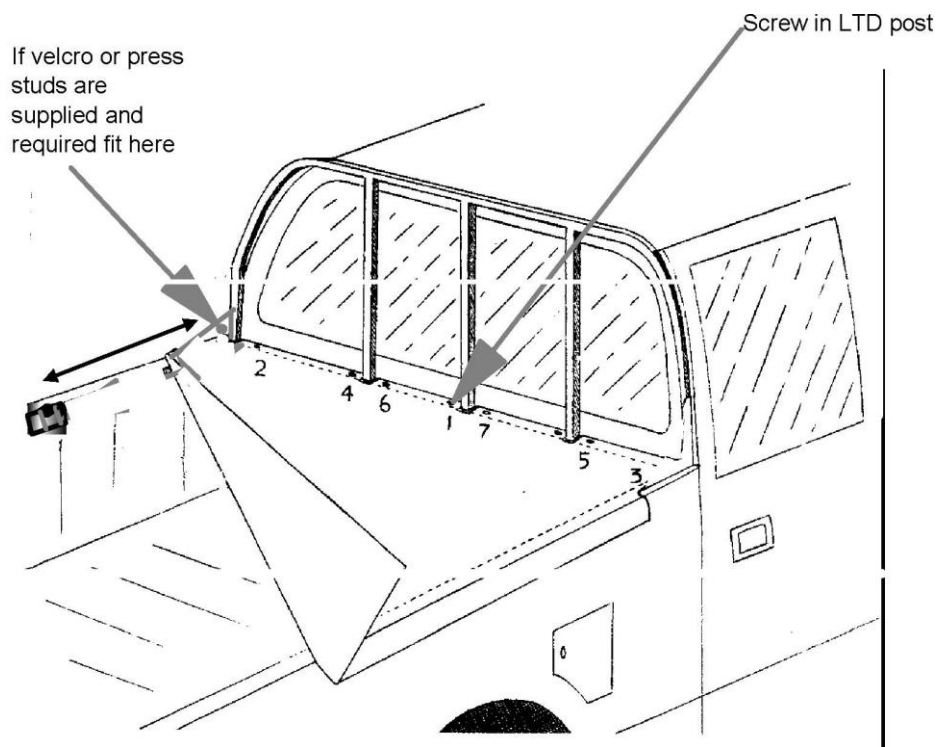

2. CARING FOR YOUR TONNEAU

Apply bee's wax or Dri-lube to stitching a few times a year, as this will maintain the tonneau's waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing brush to clean tonneau.

Never drive without tonneau support bars in place as flapping can cause a delaminating effect on the material.

"Tonneau is not designed to be used as a load restraint"

3. MULTI-FIT SUPPORT BAR

The Support Bar is designed to fit almost all Utes on the Market, from Subaru Brumbys to Cab Chassis aluminium trays.

3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

3.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece

3.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws.** You may kink the bar in the middle to give it some extra height to assist with water runoff.