

TONNEAU COVER FITTING INSTRUCTION

Nissan D27 Navara

With Sportsbar

Part Number: ATBT11936SB

BASIC TOOLS REQUIRED

- Drill, 4mm Drill Bit, Tape Measure, Rivet Gun, Marking Pencil / Pen

CONTENTS

1 x Tonneau Cover	3 x Aluminium Rope Track (461mm)
2 x Bar Brackets	28 x Rivets
1 x Tonneau Support Bar	4 x Dowels
14 x Rope Buttons	

(Some items in the fitting kit may not be needed. All fitting kits are weighed to ensure accurate quantities.)

1. INSTALLATION PROCEDURE

Attaching Rope Track

- Join three pieces of rope tracks with dowel supplied.
- Rest the aluminium rope track on the top of the front edge of the Tub, with the 'C' channel facing the cabin.
Figure 1
- Centralise the rope track. Using a 4mm drill bit, drill 2 holes on each rope tracks.
- Place a 4mm rivet in each holes as it is drilled, but do not rivet.
- Once all holes have been drilled, remove the rivets and rope track and clean any swarf.
- Apply rust inhibitor to the drilled holes in the tub and apply a bead of silicon to the rope track along the line of the holes. *Figure 2*
- Place the rope track back into position and rivet rope track into place.

Figure 1



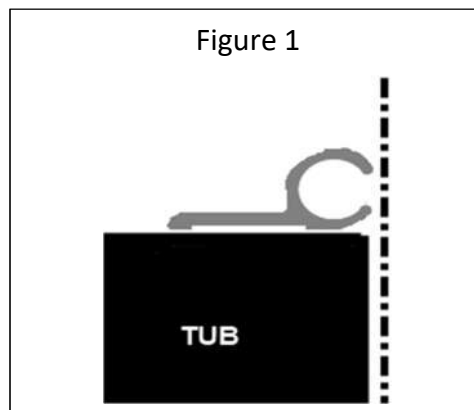


Figure 2

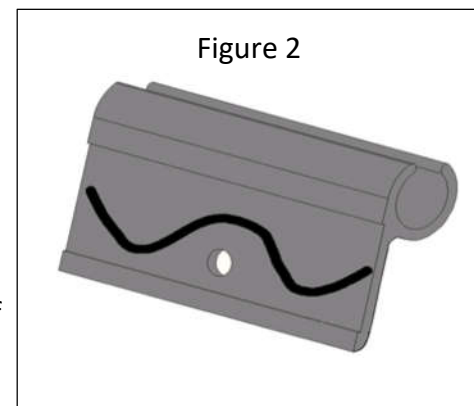


Fitting the Support Bar Brackets and the Support Bar.

1. To fit the support bar brackets, measure 770mm back from the inside front edge at the top of the tub and then place them as shown in **Figure 3**. (10mm from top edge of tub).
2. Next drill and rivet using two rivets for each Bar Bracket. Insert solid bar pieces into either end of hollow tube. Adjust the bar length so it fits into the bar bracket holders with the welded nuts facing to the ground (so that the grub screws don't rub against the cover). Use 4mm Allen Key to tighten grub screws.
3. **NOTE: The height of Support Bar above top edge of tub should be 55mm.**
The solid bars can be bent slightly to gain height when bars are assembled.

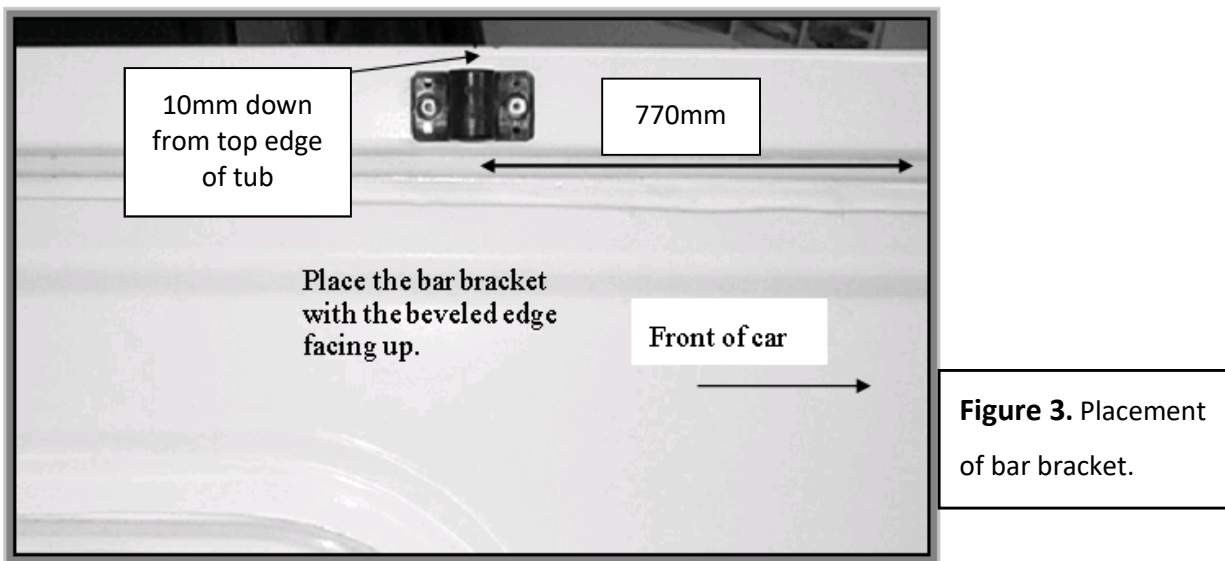


Fitting the Tailgate Buttons.

- a. Refer to **Figure 4** to mark the 6 tailgate button positions.
- b. Measure 438mm up from the bottom edge of the tailgate and 35mm in from the left and right hand side edges, mark the button positions.
- c. Measure 444mm up from the bottom edge of the tailgate and 305mm in from the left and right hand side edges, mark the button positions.
- d. Measure 447mm up from the bottom edge of the tailgate and 353mm in from the left and right hand side edges, mark the button positions.

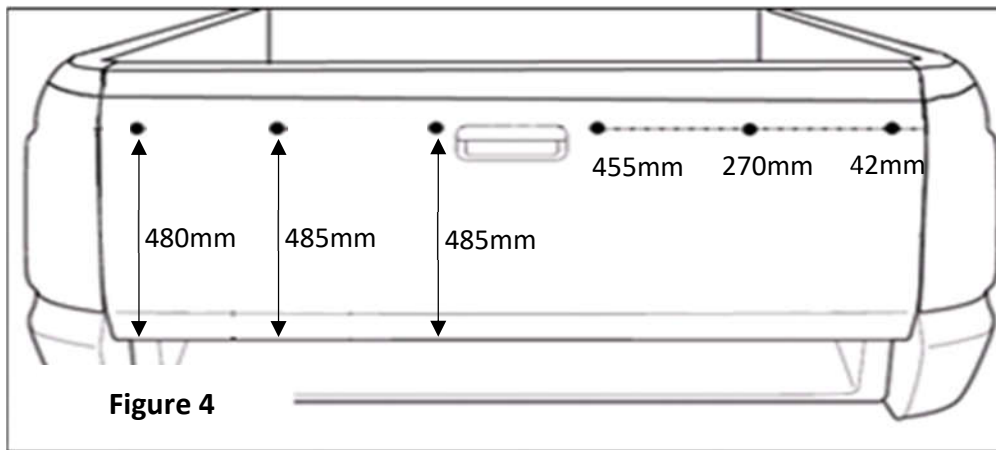


Fitting the Side Buttons.


- Attach the front of the cover into the rope track at the front of the tub.
- Drape the cover over the support bar and fit rear bunji's to buttons on the tailgate.
- Measure down 125mm from the top of the tub, and back 60mm from the front outside edge of the tub and then mark the position. See **Figure 3** below.

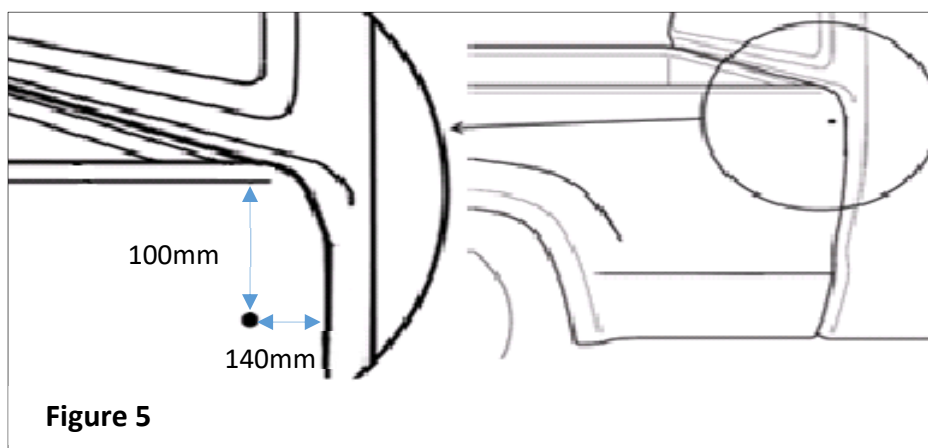

- Measure 105mm down from the top of the tub, in line with the last bunji on the side of the cover.

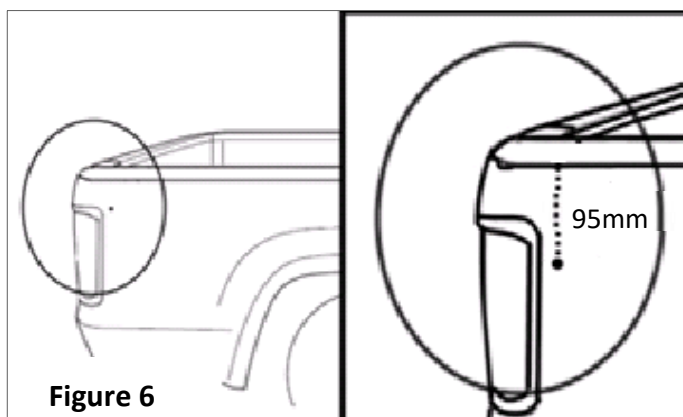


- e. Using a Straight Edge or a String Line, draw a line between front mark and rear mark.

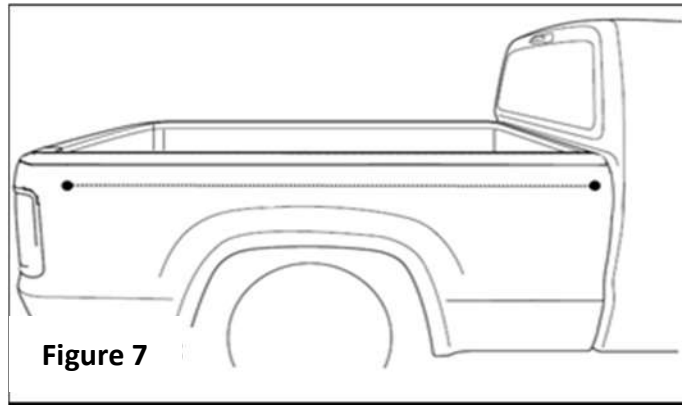


- f. To fit the Buttons to the side of tub:
- Work from the rear most bunjis towards the front, alternating from side to side.
 - Line up the rear most bunji (#1) on the driver's side of the vehicle and make a mark on the line drawn in Step 10 above.

(Non-Sports Bar model shown in **Figures 6 and 7**, but the button position is the same as for the Sports Bar model)

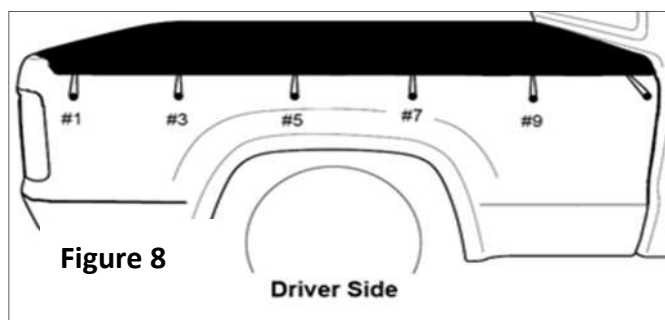

- Drill the holes and then rivet the buttons into place.
- Repeat for the Passenger side of vehicle (#2)

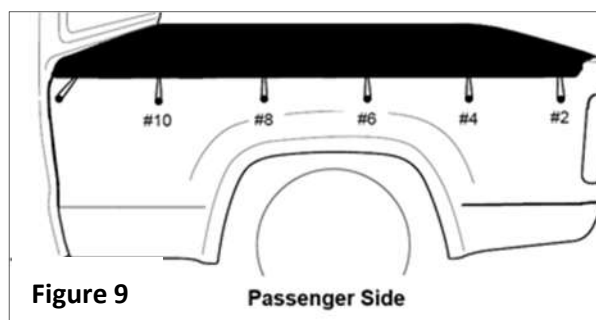

- Fit the remaining buttons following the sequence in **Figures 8 and 9**.
- Attach each bunjis as the buttons are riveted into place.

To Fit Anti-Abrasive Discs: Firstly, clean the area behind each bunji head with a clean rag and methylated sprits. Then attach the anti-abrasive discs centrally behind each bunji head.

2. CARING FOR YOUR TONNEAU

Apply bee's wax or Dri-lube to stitching a few times a year, as this will maintain the tonneau's waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing brush to clean your tonneau cover.

Never drive without tonneau support bars in place as the flapping can cause a delaminating effect on the material.

"Tonneau is not designed to be used as a load restraint"

3. MULTI-FIT SUPPORT BAR

The Aussie Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Suburu Brumbys to Cab Chassis aluminium trays.

3.1 BASIC TOOL REQUIRED

- Drill, 4mm drill bit

3.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece

3.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. Make sure you do not over tighten the grub screws. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.