

TONNEAU COVER FITTING INSTRUCTION

Holden Commodore

VE VF No Sport Bar

2007 – 2017

Part Number: ATC01070

Package Includes

- 1 x Tonneau Cover
- 2 x Black Support Bars
- 1 x Shock Cord
- 1 x Commodore Extrusion with End Cap
- 6 x Rope Hooks
- 2 x Washers
- 1 x Fitting Instruction

1. INSTALLATION PROCEDURE

- Fit the two Support Bars into the designated holes in the tub liner. The longer bar is the front bar, the shorter one is for the back.
- To fit the front extrusion, have the front plastic inserted into the centre groove of the extrusion.
- Slide the aluminium with the end caps vertically up into the recessed notches behind the cab.
- Once the extrusion is all the way up on both sides, rotate it 90 degrees so the plastic sewn into the cover is on the top.
- The extrusion then slides back towards the tailgate to lock it into position.

2. CARING FOR YOUR TONNEAU


Apply bee's wax or Dri-lube to stitching a few times a year, as this will maintain the Tonneaus waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing brush to clean tonneau.

Never drive without tonneau support bars in place as flapping can cause a delaminating effect on the material.

3. HOW TO FIT INTERNAL ELASTIC SHOCK CORD


- Tie a knot in one end of shock cord.
- Pull shock cord through all plastic hooks.
- Feed the shock cord through loops on the cover.
- Tie a knot at the other end

Feed cord through all loops

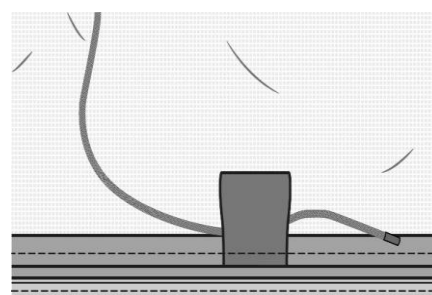


- Space the hooks as required
- Use washers to tie off rope

Tie a knot each ends of rope

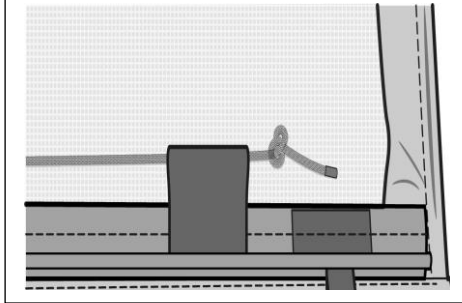

Hook placement and direction

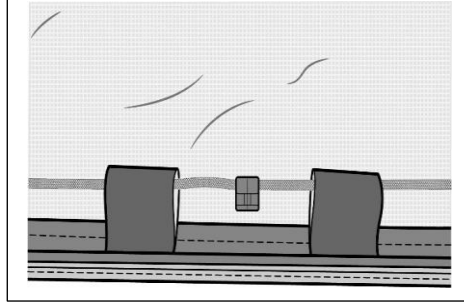

Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.