

# Tonneau Cover Fitting Instructions

**Holden Colorado Dual Cab  
With Factory Sports Bars  
(Genuine Hardware Fitted)**

**July 2012 - Current**

**Part number: ATC01299**

## **Package includes**

1 x Tonneau Cover

5 x Rope Hooks

2 x M8 Washer


1 x Fitting instructions

1 x Shock cord

## TONNEAU COVER FITTING


- (a) Attach the plastic “J” Retainer on the front of the Tonneau Cover to the front lip of the Ute tub, located behind the cab window.
- (b) Pull the cover under the sports bar and drape the cover across the tub.

Place “J” Plastic

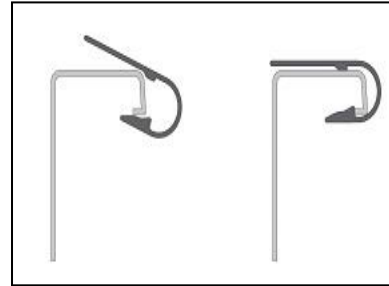

- (c) Clip the side plastics under the aluminium profile first using the pull loops in the corners to stretch the cover.
- (d) Clip the plastic on the tailgate under the aluminium profile last.

Clip the plastic on the tailgate

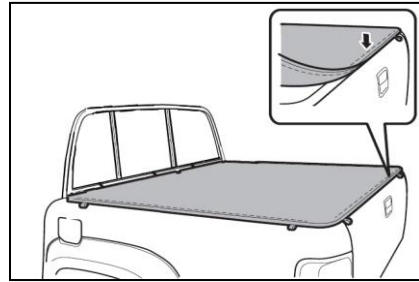

### Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.


**Your Tonneau is ready for work.**

## How to Fit Internal Elastic Shock Cord


(To be used for covering larger loads)

- Tie a knot in one end of the shock cord
- Pull shock cord through the plastic hooks
- Feed shock cord through loops on the cover
- Tie a knot at the other end
- Space the hooks as required
- Use the washers to tie off rope

Feed cord through all loops

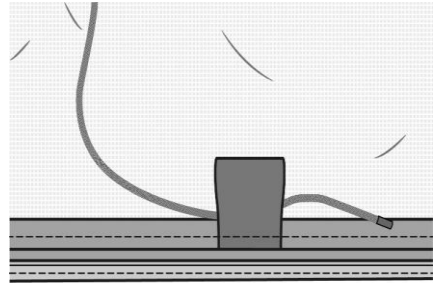

Tie a knot in each end of the rope

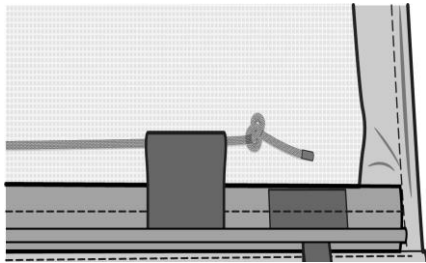

Hook placement and direction

