

# Tonneau Cover Fitting Instructions

## Holden Colorado Dual Cab With Factory Extended Sport Bar (Genuine Hardware Fitted)

July 2012 - Current

Part number: **ATC01313**

### Package includes

1 x Tonneau Cover

5 x Rope Hooks

1 x Shock cord


2 x M8 Washer

1 x Fitting instructions

## TONNEAU COVER FITTING


- (a) Attach the plastic “J” Retainer on the front of the Tonneau Cover to the front of the guard rail, behind the cab window.
- (b) Pull the cover over support bar and drape the cover across the tub.

Place “J” Plastic

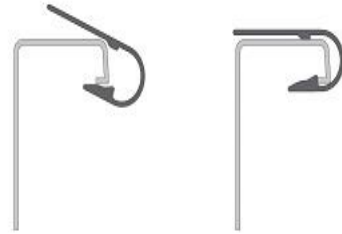

- (c) Clip the side plastics under the aluminium profile first using the pull loops in the corners to stretch the cover.
- (d) Clip the plastic on the tailgate under the aluminium profile last.

Clip the plastic on the tailgate

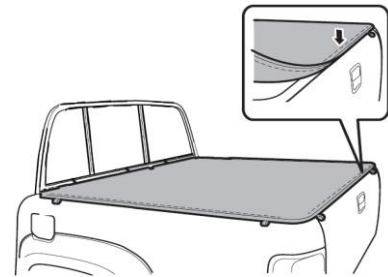

### Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.


**Your Tonneau is ready for work.**

## How to Fit Internal Elastic Shock Cord


(To be used for covering larger loads)

- Tie a knot in one end of the shock cord
- Pull shock cord through the plastic hooks
- Feed shock cord through loops on the cover
- Tie a knot at the other end
- Space the hooks as required
- Use the washers to tie off rope

Feed cord through all loops

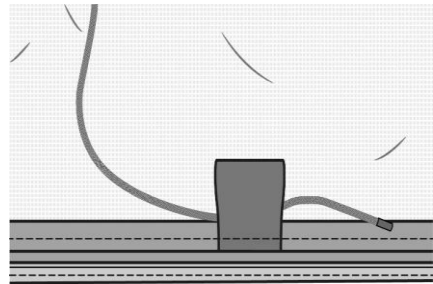

Tie a knot in each end of the rope

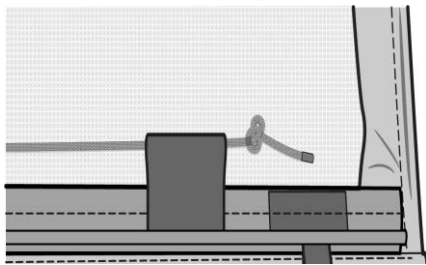

Hook placement and direction

