

Tonneau Cover Fitting Instructions

**Holden Colorado Space Cab
With Factory Sports Bars
(Genuine Hardware Fitted)**

July 2012 - Current

Part number: ATC01321

Package includes

1 x Tonneau Cover

7 x Rope Hooks


2 x M8 Washer

1 x Fitting instructions


1 x Shock cord

TONNEAU COVER FITTING

- (a) Attach the plastic “J” Retainer on the front of the Tonneau Cover to the front lip of the Ute tub, located behind the cab window.
- (b) Pull the cover under the sports bar and drape the cover across the tub.

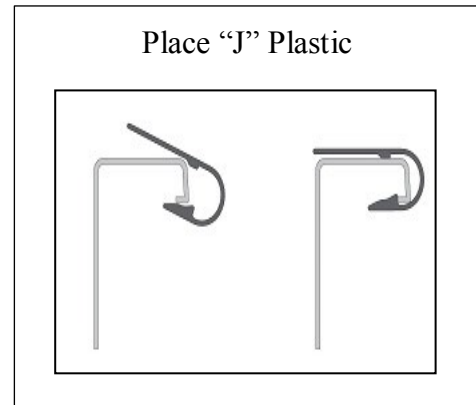

- (c) Clip the side plastics under the aluminium profile first using the pull loops in the corners to stretch the cover.
- (d) Clip the plastic on the tailgate under the aluminium profile last.

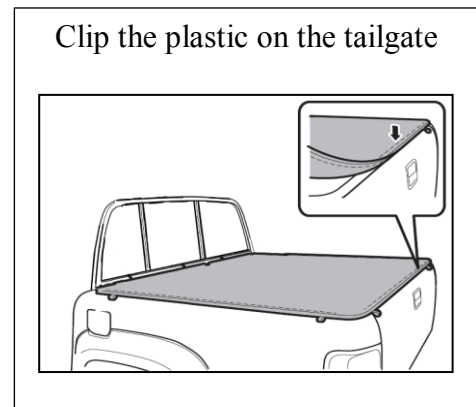

Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.


Your Tonneau is ready for work.

How to Fit Internal Elastic Shock Cord


(To be used for covering larger loads)

- Tie a knot in one end of the shock cord
- Pull shock cord through the plastic hooks
- Feed shock cord through loops on the cover
- Tie a knot at the other end
- Space the hooks as required
- Use the washers to tie off rope


Feed cord through all loops

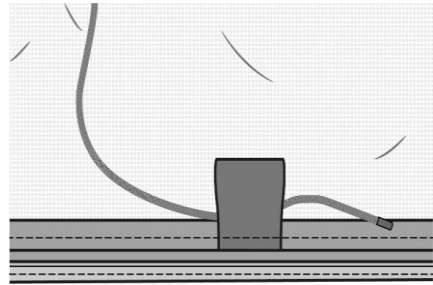

Tie a knot in each end of the rope

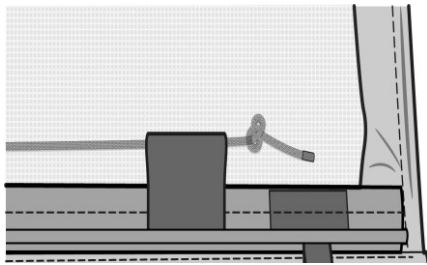

Hook placement and direction

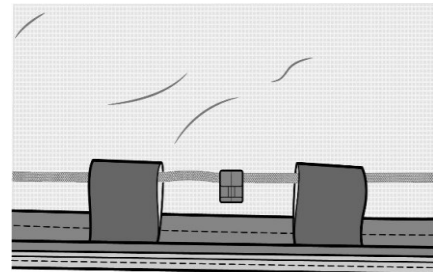

WARRANTY AND FEED BACK

Register now to activate your 3 year warranty by filling out our online form!

QR Code:



Website Link:

<http://www.aussietonneaus.com.au/en-au/warranty-card-request-form.html>

Please complete our 2 minute feedback section as we strive to constantly improve for our customers.

Thank you for purchasing an Aussie Tonneaus Product.