

# TONNEAU COVER FITTING INSTRUCTION

Ford Falcon FG

June 2008 – July 2016

Part Number: ATC01326

## Package Includes

- 1 x Tonneau Cover
- 2 x Support Bars
- 1 x Shock Cord
- 1 x Instruction
- 4 x Bar Brackets
- 8 x Rivets
- 7 x Rope Hooks
- 2 x Washers

## 1. INSTALLATION PROCEDURE


### 1. Fit Bar Brackets:

Measure 640mm and 1240mm from the front of the tub.

Place centre of brackets at these points with the top of the bracket 10mm down from top edge of tub.

Using Bar Brackets as guide, drill into the body.

Rivet into place. **Figure 1**

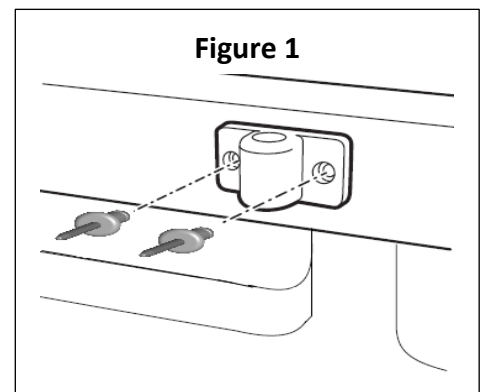

### 2. Install Support Bars:

Follow instructions in Section 3 to install the 2 Support Bars.


### 3. Install Tonneau Cover:

Place Tonneau Cover over Support Bars and secure the 'J' plastic retainer to the front rail.

Pull the rear of the cover over the tailgate to make cover taut. Hinge the plastic over the top edge of the rail.

Keep pressure and push the hook of the plastic over the bottom lip of the rail to secure into place.

Secure the cover along the entire length of the tailgate rail and repeat the process for the passenger and driver side of the tub. **Figure 2**

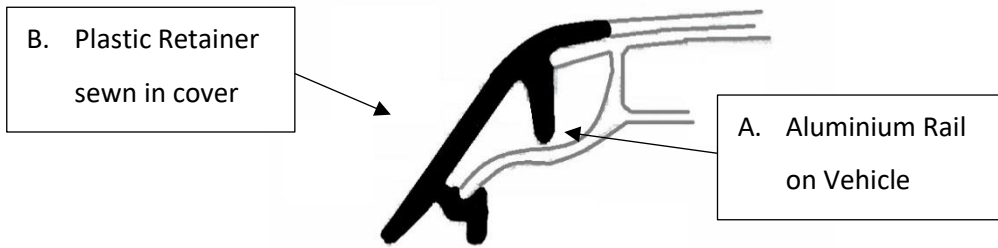


Profile view of secured cover

**Figure 2**


## 2. HOW TO FIT INTERNAL ELASTIC SHOCK CORD

- Tie a knot in one end of shock cord.
- Pull shock cord through all plastic hooks.
- Feed the shock cord through loops on the cover.
- Tie a knot at the other end
- Space the hooks as required
- Use washers to tie off rope


**Feed cord through all loops**

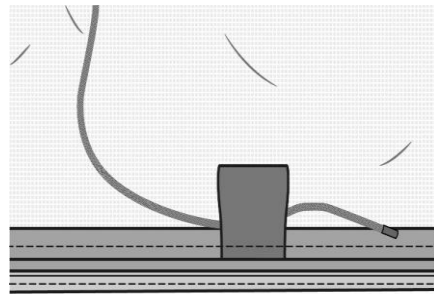

**Tie a knot each ends of rope**

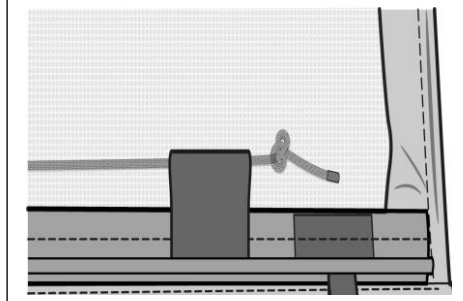

**Hook placement and direction**

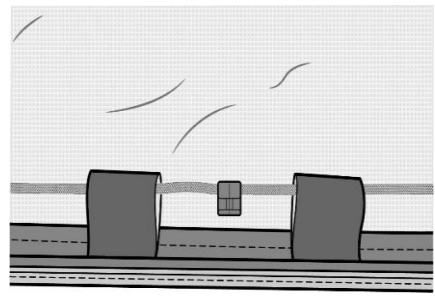

### Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.

## 3. MULTI-FIT SUPPORT BAR

The Aussie Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru, Brumby's, to Cab Chassis and aluminium trays.



### 3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

### 3.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece

### 3.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws** You may kink the bar in the middle to give it some extra height to assist with water runoff.