

# TONNEAU COVER FITTING INSTRUCTION

**LDV T60 Crew Cab**

**With Headboard**

**Clip On Tonneau Cover**

**Part No. ATC01587**


**Installation Time: 1 Hour**

<b>Package includes</b>	
1 x Tonneau Cover	20 x 4 mm Rivet
1 x Aluminium Tailgate Rail	2 x Bar Bracket
2 x Aluminium Front Side Rail	1 x Internal Shock Cord
1 x Support Bar (300517)	5 x Rope Hooks
	2 x Washers
	1 x Fitting Instruction

## 1. Attach Side Aluminium Rail


To attach the side aluminium profiles:

- (a) Locate the Side Rail (1400mm) hard up against the front edge of the tub with the notch to the rear with the aluminium square with the top of the tub.
- (b) From the front edge of the rail, measure and mark the following locations:
  - 50mm, 380mm, 660mm, 692.5mm, 970mm and 1220mm.
- (c) Drill through those locations into tub, using 4.5 drill bit. Then rivet into 50mm, 380mm, 970mm and 1220mm.

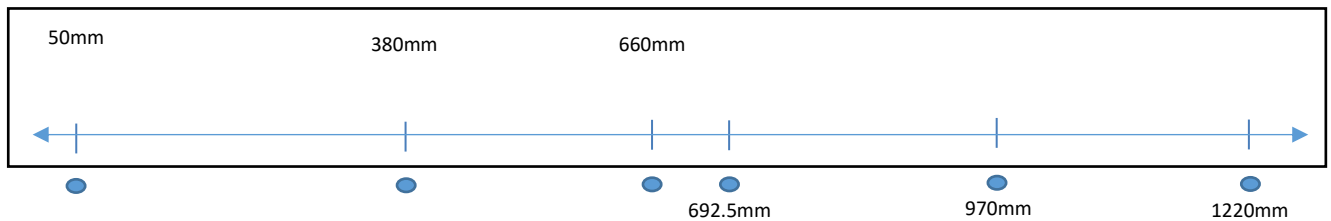

## 2. Attach Bar Bracket



- (a) Attach the bar bracket by placing a 4mm rivet through each hole of the bracket and into the centre holes in the rail.
- (b) Rivet remaining holes (660mm and 692.5mm).

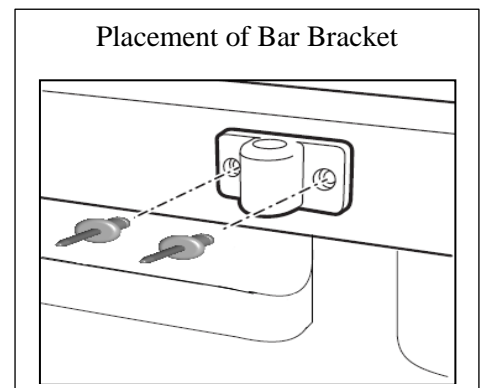

❖ **Repeat Those Instructions For The Other Side.**


### 3. Attach Tailgate Aluminium Rail

- Measure and mark the centre, and 325mm and 650mm from the centre of the rail, 30mm from the bottom edge.
- Position the aluminium in the centre of the tailgate, so that it is sitting square with the top surface of the tailgate.
- Drill through each of the holes in the aluminium rail into the tailgate. Rivet the tailgate rail to the tailgate to complete the attachment.

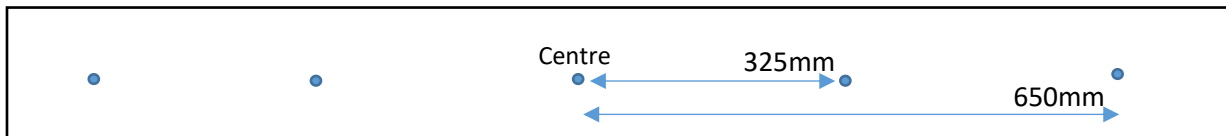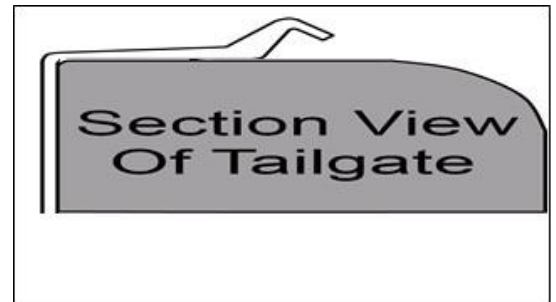

### 4. Fit The Support Bar

- Insert solid bar pieces into either end of hollow tube. Place the bar into the Bar Brackets and centre the hollow tube.
- Adjust the hollow tube so the holes are facing to the ground (this prevents the grub screws rubbing against the tonneau).
- Tighten the grub screws to secure the hollow tube into place.

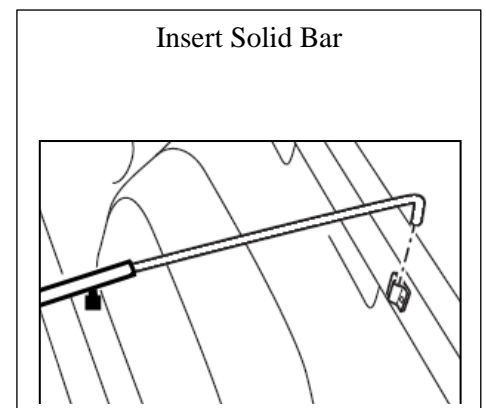

### 5. Attach The Cover

- Place the 3 Plastic Retainers (Fitted on the Tonneau Cover) on to the Metal Lip, in front and below the Headboard, between the cabin and the Ute Body.
- Clip the rear plastics under the tailgate rail first.
- Clip the plastic on the sides under the side rails last.

**You can adjust your tonneau, to make it tighter or looser, by simply raising or lowering the height of your tonneau support bar.**

## How to Fit Internal Elastic Shock Cord

To be used for covering larger loads

- Tie a knot in one end of the shock cord.
- Pull shock cord through all plastic hooks.
- Feed the shock cord through loops on the cover.
- Tie a knot at the other end.
- Space the hooks as required.
- Use washers to tie off rope.

