

# **Fitting Instruction**

Clip On Soft Tonneau Cover

Part No. ATC01836

Nissan Navara D40 Dual Cab  
With Headbord Model

## Installation Instruction

Please note before fitment:



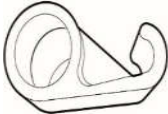

- Read all instructions prior to fitting the Tonneau cover.
- Check that the fitting kit is complete before beginning the installation.
- If replacing any other cover all hardware must be replaced with hardware supplied.

## Safety Notes

- Ensure that appropriate Personal Protective Equipment is used.
- Always refer to vehicle's work shop manual when removing components.



## Parts Supplied

Tonneau Cover x 1	Shock Cord x 1	Rope Hook x 7	Washer x 2
			

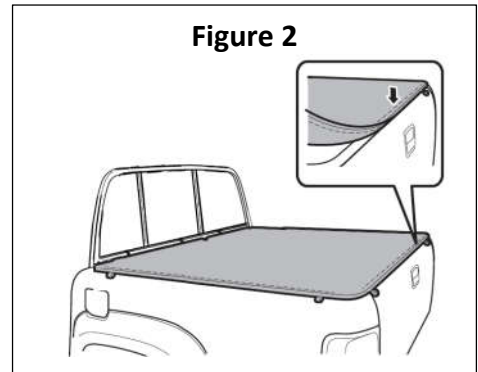
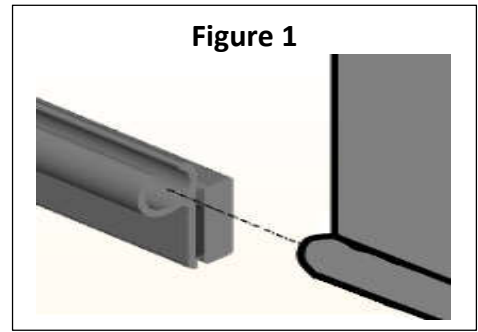
## Tools Required

N/A

***NB: This item is tonneau cover only.***

## TONNEAU COVER FITTING

1. To attach the cover, slide the front rope of tonneau cover into the ropetrack channel and centre the cover. **Figure 1**
2. Pull the cover under the sports bar and drape the cover across the tub.
3. Clip the side plastics under the aluminium profile first using the pull loops in the corners to stretch the cover.
4. Clip the plastic on the tailgate under the aluminium profile last. **See Figure 2**



### Using Internal Elastic Shock Cord

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.

**Your Tonneau is ready for work.**

### How to Fit Internal Elastic Shock Cord (To be used for covering larger loads)

- Tie a knot in one end of the shock cord
- Pull shock cord through the plastic hooks
- Feed shock cord through loops on the cover
- Tie a knot at the other end
- Space the hooks as required
- Use the washers to tie off rope

