


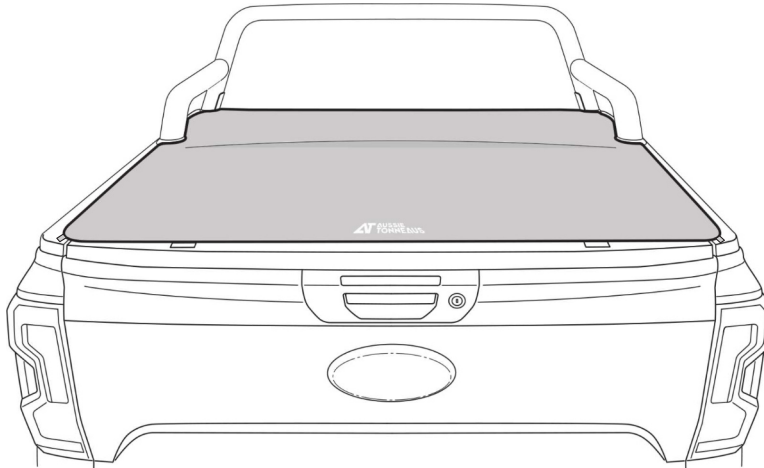


# FITTING INSTRUCTIONS


## Clip On Covers




### In the Box

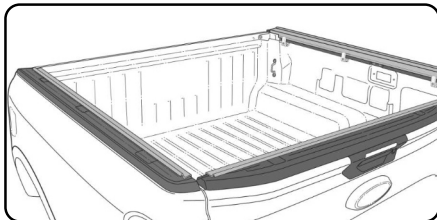

No Sport Bar Model

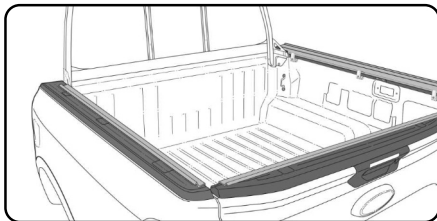

Headboard Model

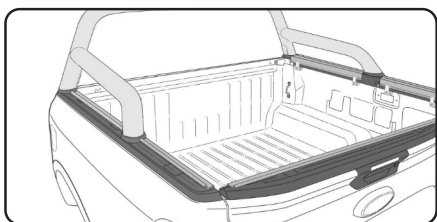

Sport Bar Model



### Tools Required





4mm Hex Key





Screw Driver

# 1. Attach the Side Aluminium Rails



## Clamp Assembly

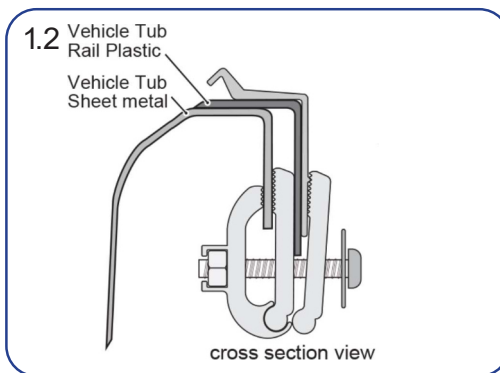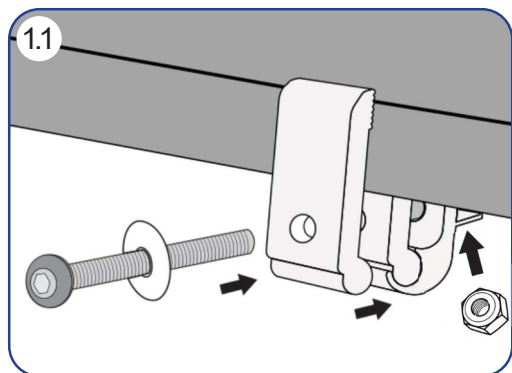



### No Sport Bar Model

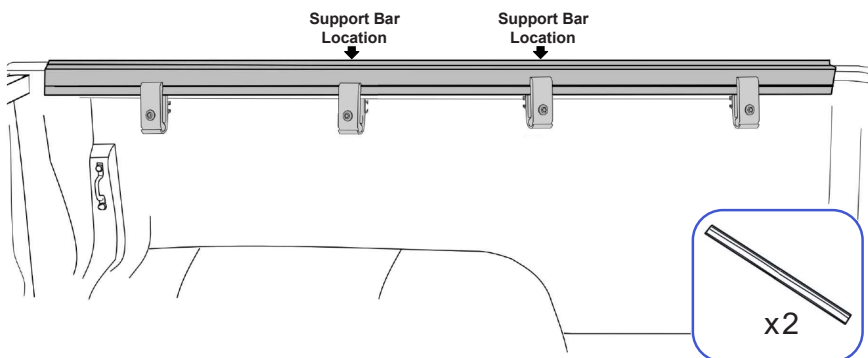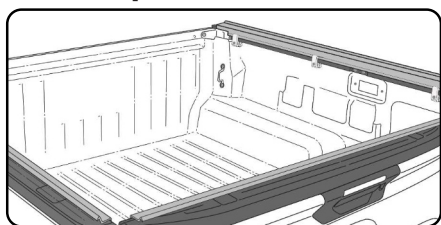

### Headboard Model

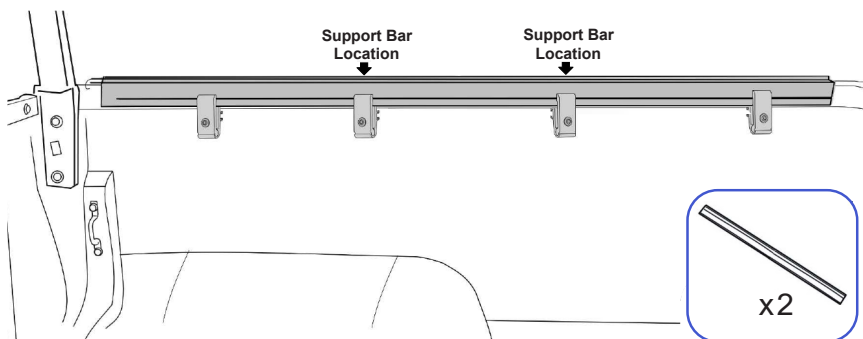
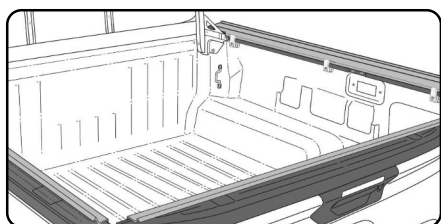


### Sport Bar Models

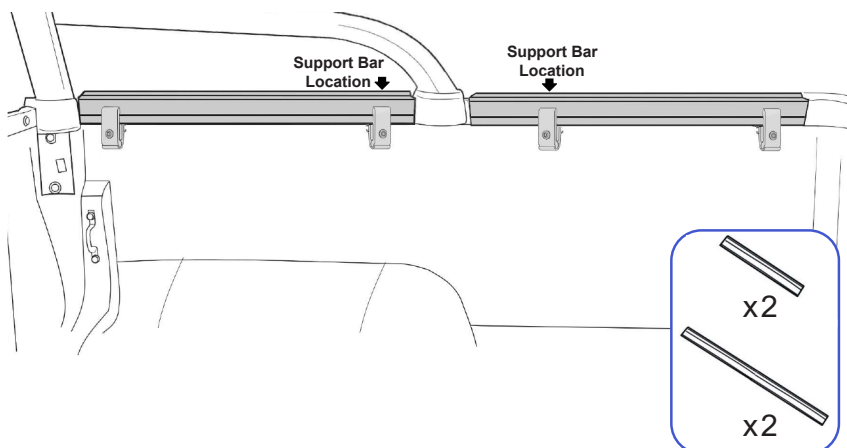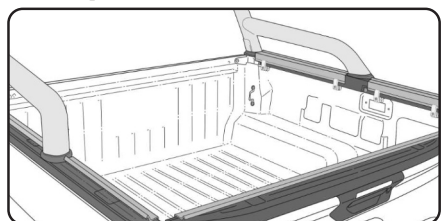


## 2. Attach Support Bars

2.1 Fit the Curved Oval tube to top of the the aluminium rails, in the centre of the Tub.

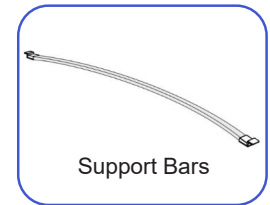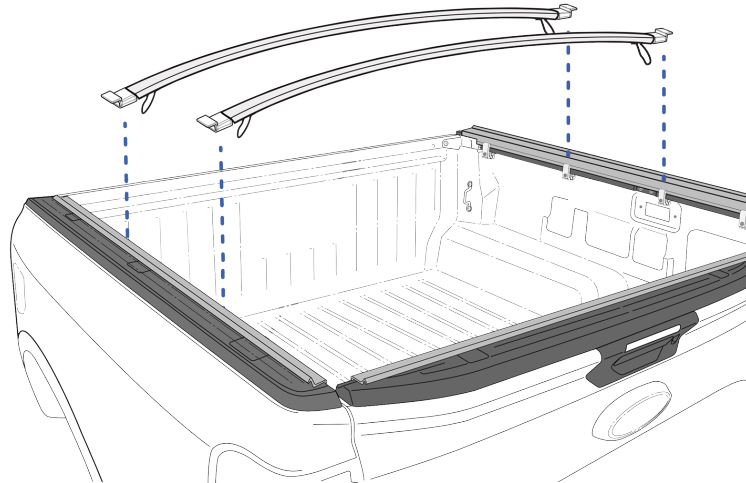

2.2 Wrap bunji cord around the centre clamp. This is to prevent support bars from coming off.


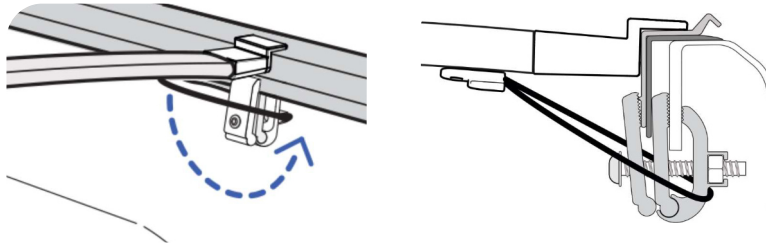


## 4. Attaching Tailgate Rail

4.1 Place the Tailgate Rail as shown so it is flush with the top surface.



4.2 Drill 5 evenly spaced holes (4mm) 55mm up from the bottom of the rail.

4.3 Attach 5 rivets into these locations.

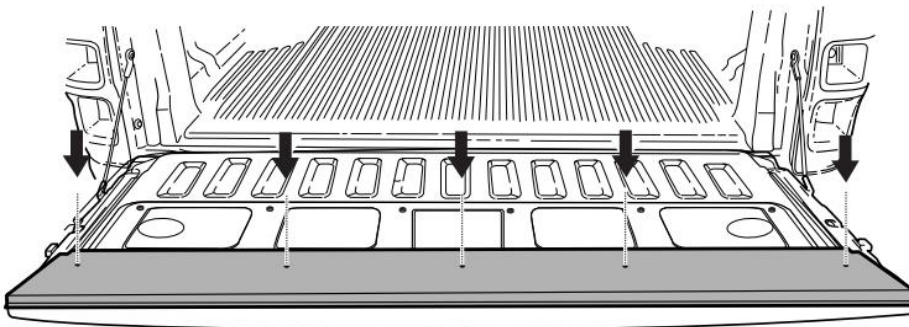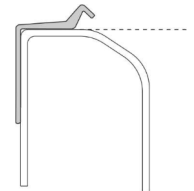


## 5. Fitting the cover


1. Attach front of the cover to front lip of vehicle.
2. Engage the back of cover first, followed by the sides. The corners have pull tabs to help pull the cover in place.

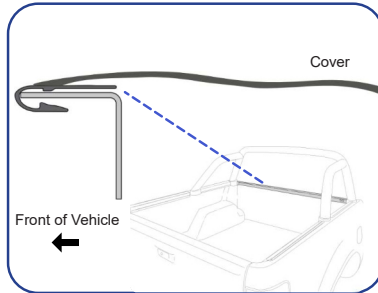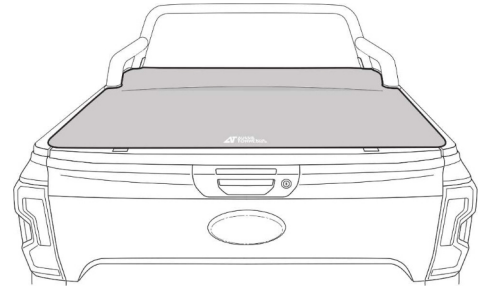

1

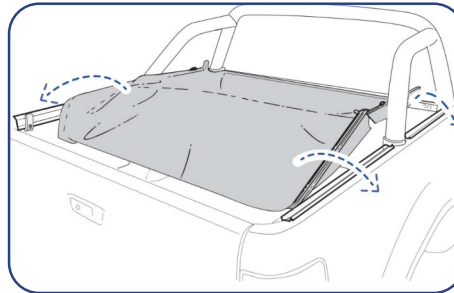

2

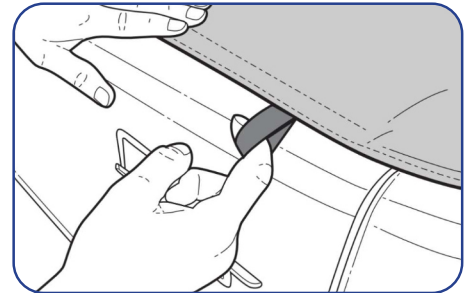

3