

Fitting Instruction

Clip On Soft Tonneau Cover

Part No. ATC01866

**BYD Shark6 Dual Cab
With Sport Bar Model**

Installation Instruction

Please note before fitment:



- Read all instructions prior to fitting the Tonneau cover.
- Check that the fitting kit is complete before beginning the installation.
- If replacing any other cover all hardware must be replaced with hardware supplied.

Safety Notes

- Ensure that appropriate Personal Protective Equipment is used.
- Always refer to vehicle's work shop manual when removing components.



Parts Supplied

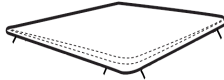
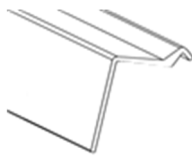
Tonneau Cover x 1	Front Ally x 1	Tailgate Rail x 1	Rear Side Rail x 2	Front Side Rail x 2
				
Support Bar x 1	Support Bar Bracket x 2	Rivets x 25	Shock Cord x 1 Rope Hook x 5 Washer x 2	
				

Tools Required

Drill	Pop Rivet Gun	Tape Measure	Pencil/ Marker	4mm Drill Bit
				

1. Attaching Front Ally

- Align The Front Ally 5mm from the top of the front edge of the Tub. Centralize the Front Ally. *Figure 1*
- Using a 4 mm drill bit, drill 5 holes evenly spaced through the Front Ally into the tub. The first hole at each end should be 100mm from the edge of the Front Ally and 37mm from button. *Figure 2*
- Place a 4mm rivet in each hole as it is drilled, but do not rivet. Once all holes have been drilled, remove the rivets and Front Ally and clean any swarf.
- Apply rust inhibitor to the drilled holes in the tub.
- Place the Front Ally back into position and rivet the Front Ally into place.

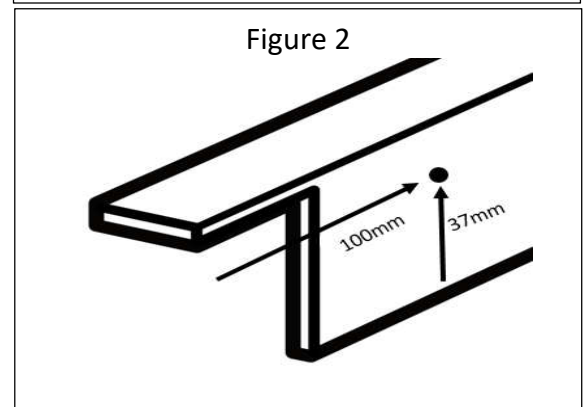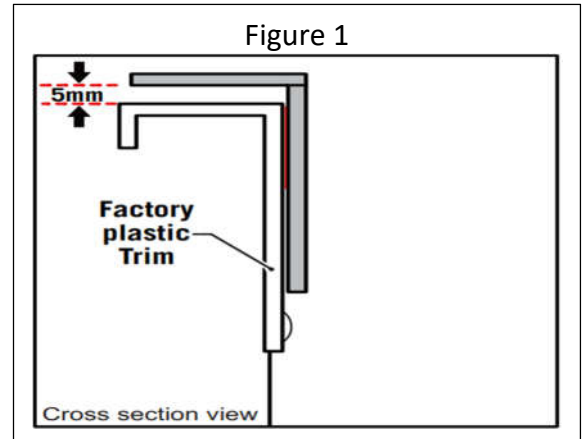

2. Attaching Front Side Rails & Bar Brackets

- Centre the rail 600mm between the sports bars, the notch ends forward to the front. Ensure the aluminum is square and flush with the top of the tub. *Figure 3*
- From the front edge of the rail, 30mm from the bottom edge, measure and mark the following locations:
 - 130mm and 350mm, 548mm and 580mm



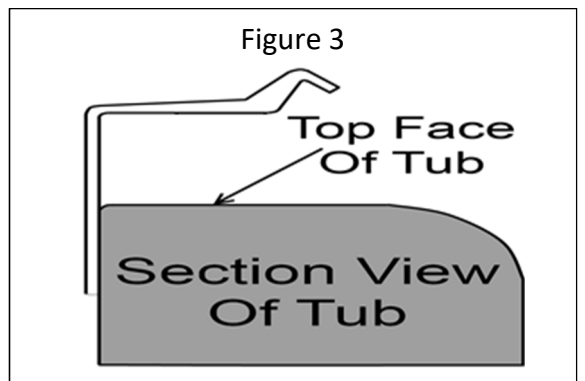


Figure 4

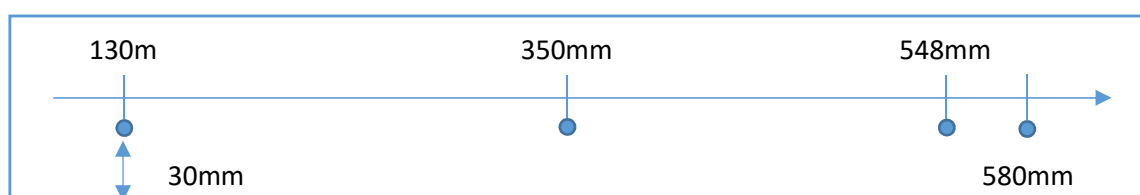

IMPORTANT: Keep **ALL Rails** flush with top of the Tub Walls and Tailgate while drilling.

- c. Drill each of the marked locations through the aluminum and into the inside edge of the tub. And rivet into 130mm and 350mm.
- d. Attach the bar bracket by placing a 4mm rivet through each hole of the bracket and rivet into the remaining holes, 548mm and 580mm.
Figure 5
- e. Repeat those steps for the passenger's side.

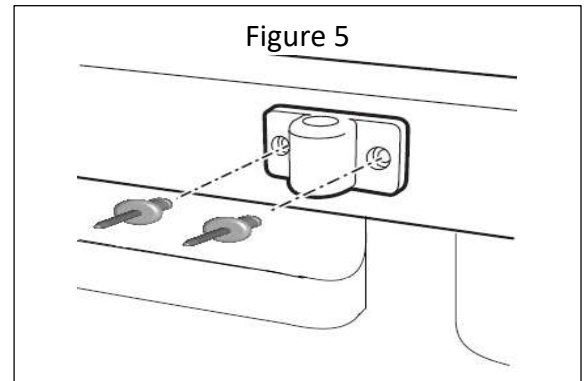


3. Attaching Rear Side Rails

- a. Place the rail 650mm 5mm behind the sports bars. Ensure the aluminum is square and flush with the top of the tub.
- b. Measure and mark a spot 130mm from the each end and one in the middle, 30mm up from the bottom edge of the rail.
- c. Drill through these locations into the tub using a 4mm drill bit. Then rivet into place.


4. Attaching Support Bar

- a. Undo grub screws on the hollow tube, then insert solid bar pieces into either end of hollow tube.
- b. Place the bar into the bar brackets (*see Figure 6*) and centre the hollow tube in the middle of the tub.
- c. Adjust the hollow tube so the screws are facing the tub floor. This prevents the grub screws rubbing against the tonneau cover.
- d. Tighten the grub screws to secure the hollow tube into place.

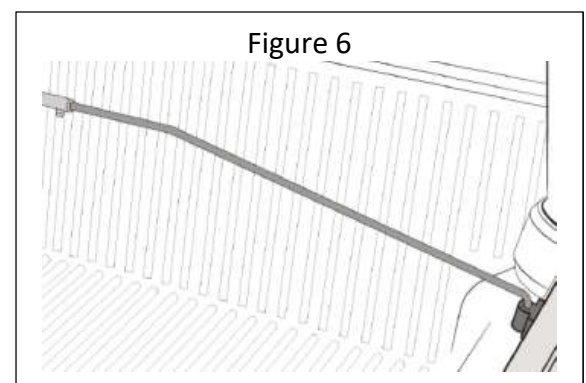


5. Attaching Tailgate Rail

- a. Centre the aluminum rail on the tailgate and mark the tailgate for future reference (*see Figure 8*).

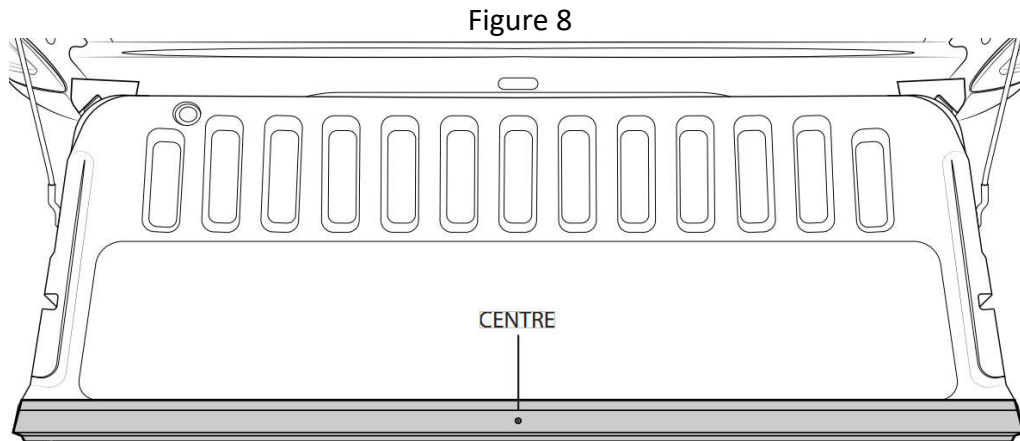


- b. Measure and mark all 5 points on the aluminum rail (*see Figure 9*) then drill out all 5 using a 4mm drill bit. We recommend drilling just the aluminum rail in this step.

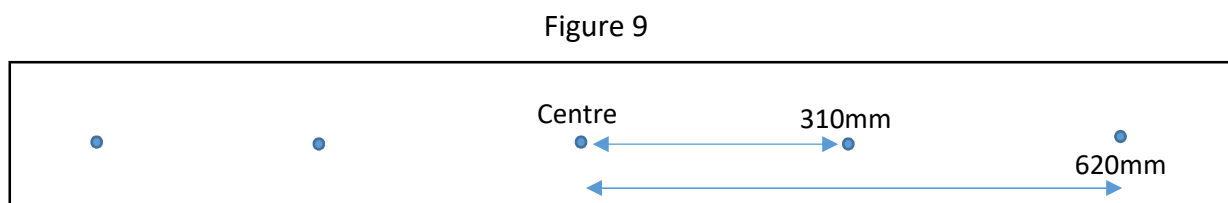

- c. With the aluminum now drilled, place it back onto the tailgate and re-center, aligning with the previously measured center mark.
- d. Drill through all 5 holes into the tailgate with the 4mm drill bit.
- e. Utilizing the rivets provided, use your rivet gun to rivet the rail in at all 5 locations.




6. Fit Cover to Vehicle

- To attach the cover, Clip the J Retainer to the front Ally across the tub, make sure J Retainer is engaged. *Figure 9*
- Clip the side plast under the aluminium rails to stretch the cover. Clip the plastic on the tailgate under the aluminium profile last.
- You can adjust your tonneau, to make it tighter or looser, by simply raising or lowering the height of your tonneau support bar.

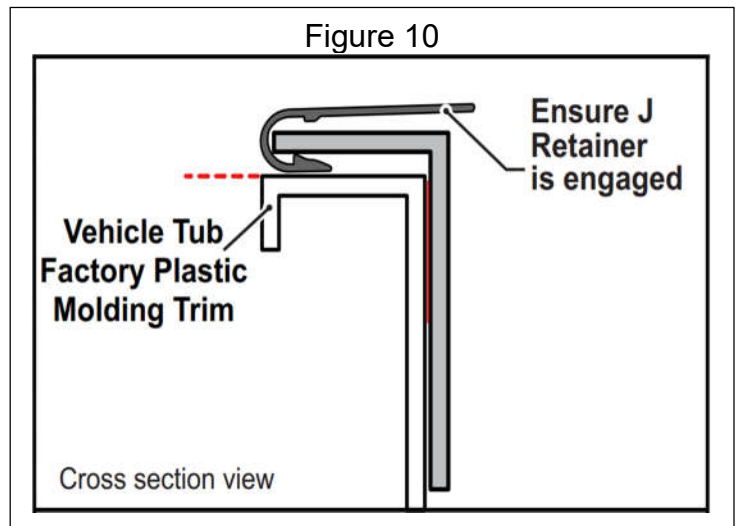

7. How To Fit Internal Shock Cord

- Tie a knot in one end of the shock cord
- Pull shock cord through all the plastic hooks.
- Feed the shock cord through the loops on the cover.
- Tie a knot at the other end.
- Space the hooks as required.
- Use washers to tie off the shock cord.

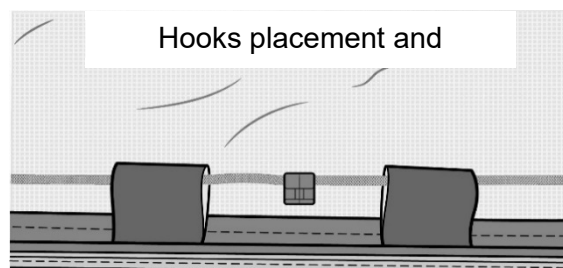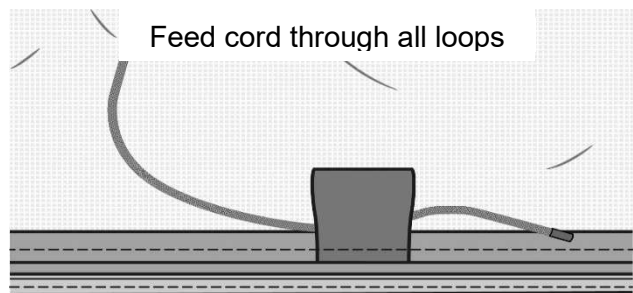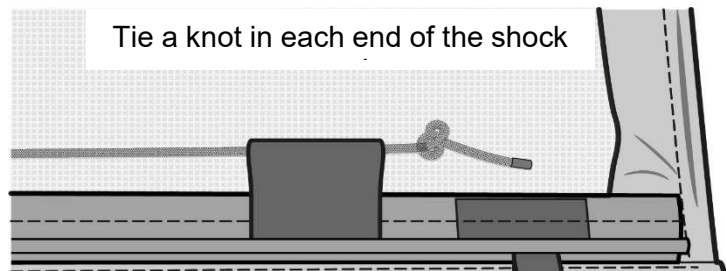

8. Warranty And Feedback

Send us A Photo of Your Fitted Cover



Happy with how your tonneau turned out? Please email us a photo of your Ute to: sales@aussietonneaus.com.au

Please try and replicate this angle when taking a photo – thanks in advance for contributing!