



Fitting Instruction

Clip On Soft Tonneau Cover

Part No. ATCA11902

**BYD Shark6 Dual Cab
Without Sport Bar Model & Headbaord**

Installation Instruction

Please note before fitment:





- Read all instructions prior to fitting the Tonneau cover.
- Check that the fitting kit is complete before beginning the installation.
- If replacing any other cover all hardware must be replaced with hardware supplied.

Safety Notes


- Ensure that appropriate Personal Protective Equipment is used.
- Always refer to vehicle's work shop manual when removing components.



Parts Supplied

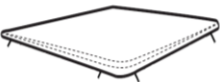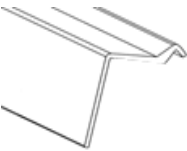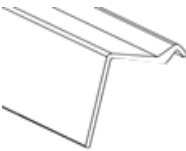
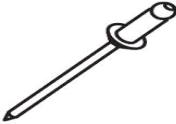
Tonneau Cover x 1	Front Ally x 1	Tailgate Rail x 1	Side Rail x 2	Support Bar x 1
				
Support Bar Bracket x 2	Rivets x 25	Shock Cord x 1 Rope Hook x 5 Washer x 2		
				

Tools Required

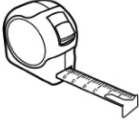Drill	Pop Rivet Gun	Tape Measure	Pencil/ Marker	4mm Drill Bit
				

1. Attaching Front Ally



- Rest the Front Ally to the inner front edge of the Tub, Centralize the Front Ally, Make sure to leave 5mm gap between the top of the Front Ally and Tub. *Figure 1*
- Using a 4 mm drill bit, drill 5 holes evenly spaced through the Front Ally into the tub.
- The first hole at each end should be 50mm from the edge of the Front Ally and 37mm from button. *Figure 2*
- Place a 4mm rivet in each hole as it is drilled, but do not rivet. Once all holes have been drilled, remove the rivets and Front Ally and clean any swarf.
- Apply rust inhibitor to the drilled holes in the tub
- Place the Front Ally back into position and rivet Ally into place.

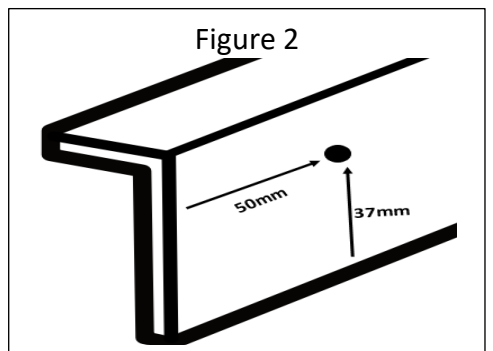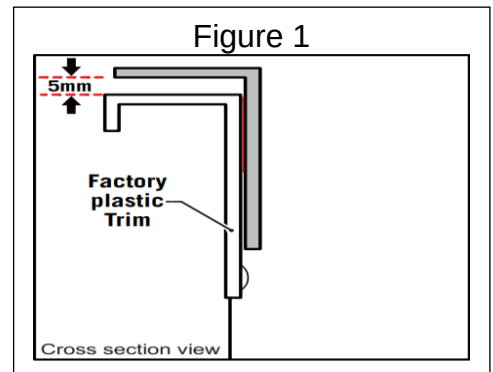

2. Attaching Side Rails

- Locate the Side Rail (1440mm) hard up against the front edge of the tub with the notch to the front and rear with the aluminium square with the top of the tub. *Figure 3*
- From the front edge of the rail, measure and mark the following locations:


150mm, 407mm, 439mm, 801mm, 833mm and 1290mm, 30mm up from the bottom edge of the rail.

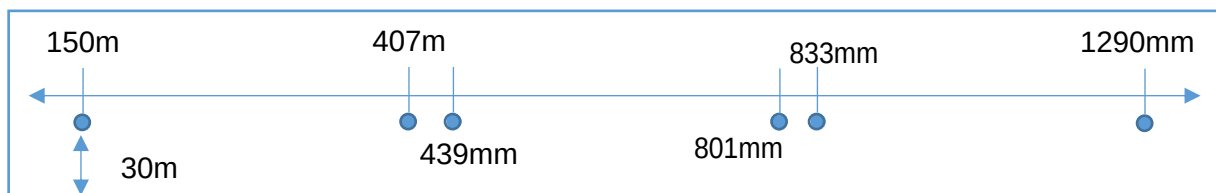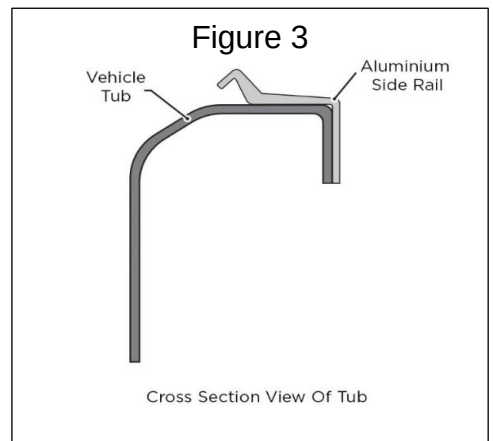

- Drill through those locations into tub, using 4mm drill bit. Then rivet into 120mm, 824mm, 1320mm.

- d. Attaching the bar brackets by placing a 4mm rivets through each hole of bracket and into the centre holes in the rail.
- e. Rivet remaining holes 407mm, 439mm, 801mm and 833mm.
- f. Repeat those steps for the other side rail.


Figure 5

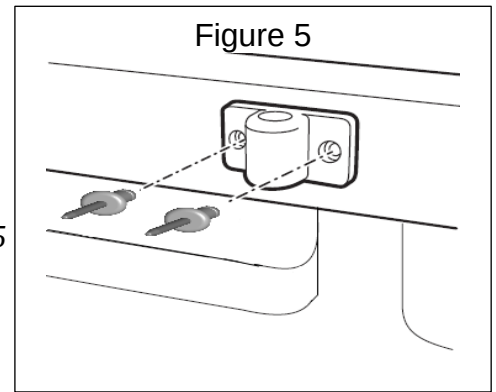

3. Attaching Support Bar

- a. Undo grub screws on the hollow tube, then insert solid bar pieces into either end of hollow tube.
- b. Place the bar into the bar brackets (see Figure 6) and centre the hollow tube in the middle of the tub.
- c. Adjust the hollow tube so the screws are facing the tub floor. This prevents the grub screws rubbing against the tonneau cover.
- d. Tighten the grub screws to secure the hollow tube into place.


Figure 6

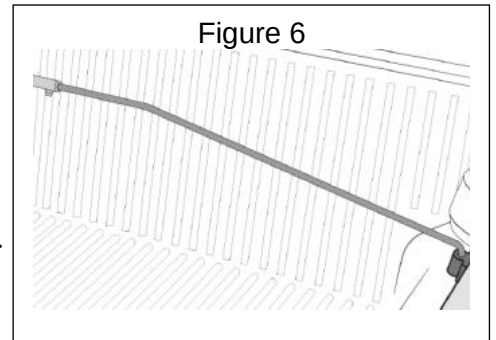

4. Attaching Tailgate


- a. Centre the aluminium rail on the tailgate and mark the tailgate for future reference (see Figure 7).

Figure 7

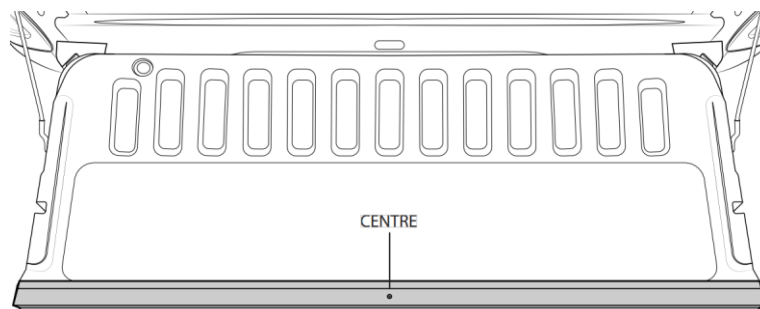

- b. Measure and mark all 5 points on the aluminium rail (see Figure 8) then drill out all 5 using a 4mm drill bit. We recommend drilling just the aluminium rail in this step.

Figure 8

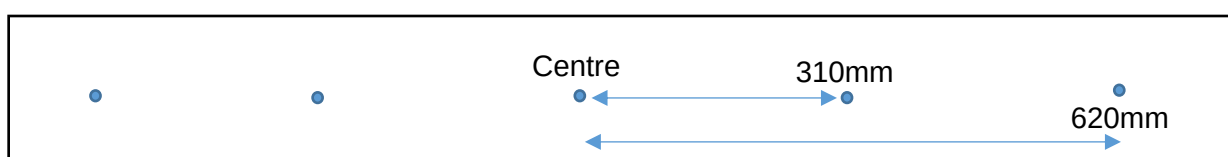


- c. With the aluminium now drilled, place it back onto the tailgate and re-centre, aligning with the previously measured centre mark.

- d. Drill through all 5 holes into the tailgate with the 4mm drill bit.
- e. Utilizing the rivets provided, use your rivet gun to rivet the rail in at all 5 locations.


5. Fit The Tonneau Cover

- a. To attach the cover, Clip the J Retainer to the front Ally across the tub, make sure J Retainer is engaged. *Figure 9*
- b. Clip the side plast under the aluminium rails to stretch the cover. Clip the plastic on the tailgate under the aluminium profile last.
- c. You can adjust your tonneau, to make it tighter or looser, by simply raising or lowering the height of your tonneau support bar.

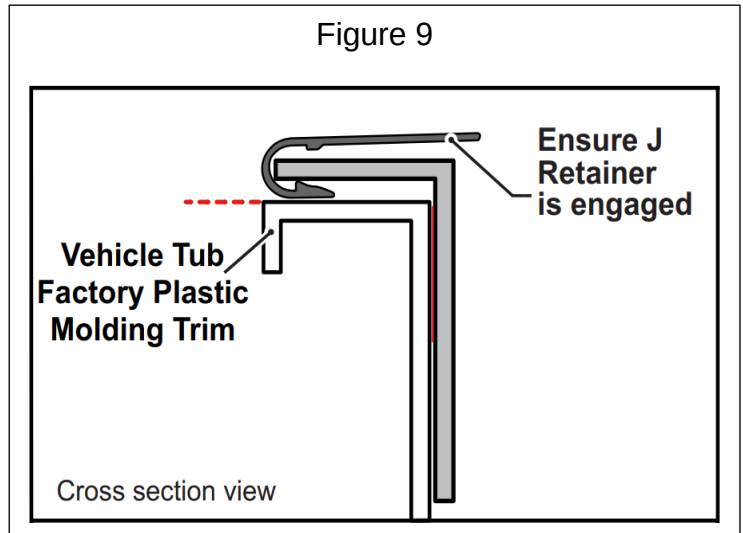

6. How To Fit Internal Shock Cord

- a. Tie a knot in one end of the shock cord
- b. Pull shock cord through all the plastic hooks.
- c. Feed the shock cord through the loops on the cover.
- d. Tie a knot at the other end.
- e. Space the hooks as required.
- f. Use washers to tie off the shock cord.

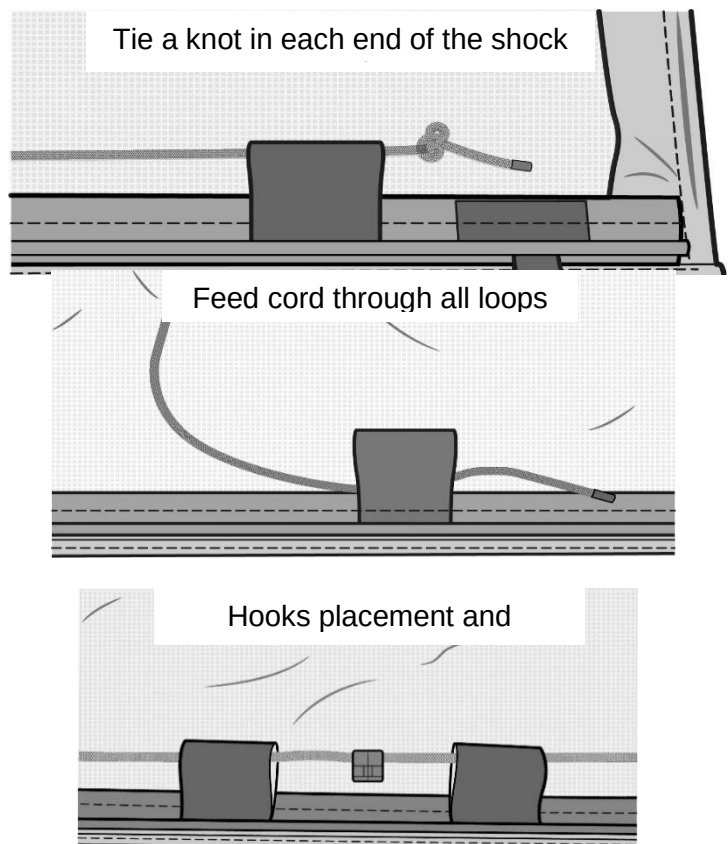

7. Warranty And Feedback

Send us A Photo of Your Fitted Cover



Happy with how your tonneau turned out? Please email us a photo of your Ute to: sales@aussietonneaus.com.au

- Please try and replicate this angle when taking a photo – thanks in advance for contributing!