
FITTING INSTRUCTIONS

Clamp On Pro Covers

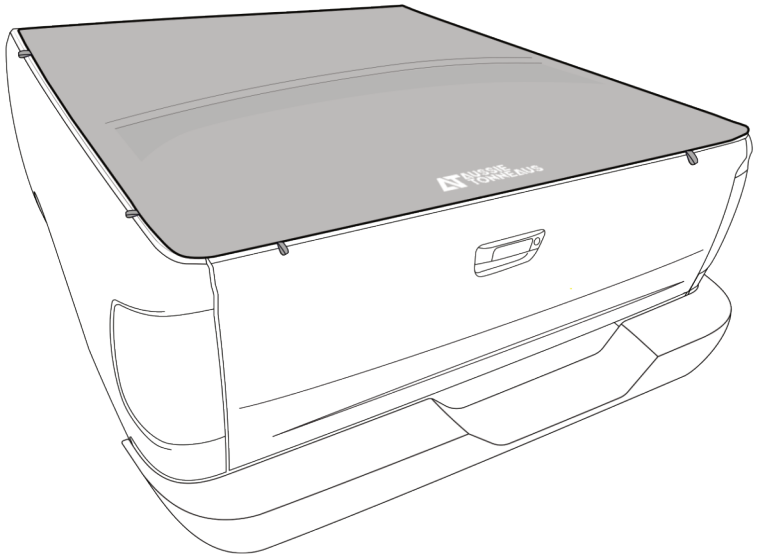

Tools Required




4mm Hex Key





13mm Spanner

In the Box

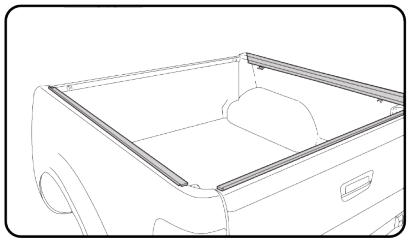



No Sport Bar Models

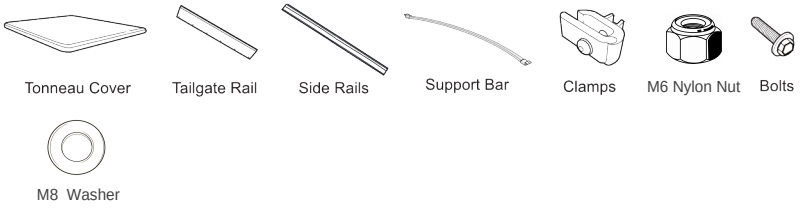

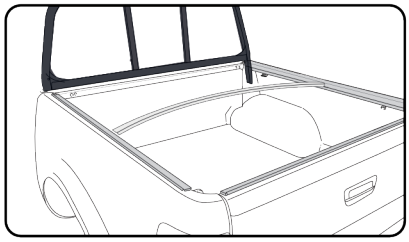


Headboard Models

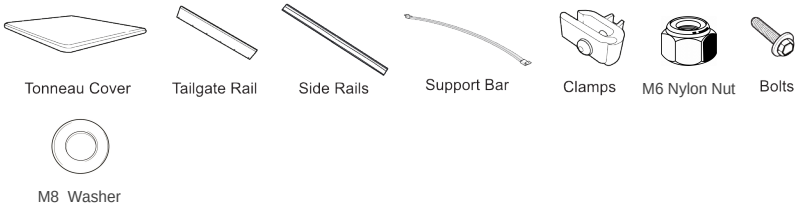

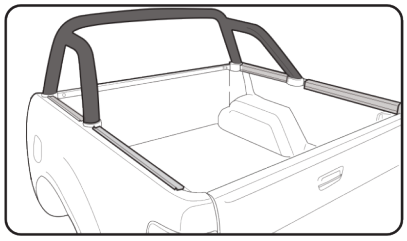


Sport Bar Models

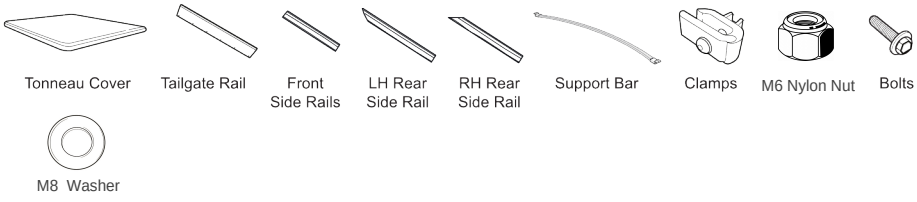


1. Attach the Side Aluminium Rails


***SEE APPENDIX FOR CARS: VW Amarok & Ram 1500 & Mitsubishi MQ/MR**

Clamp Assembly

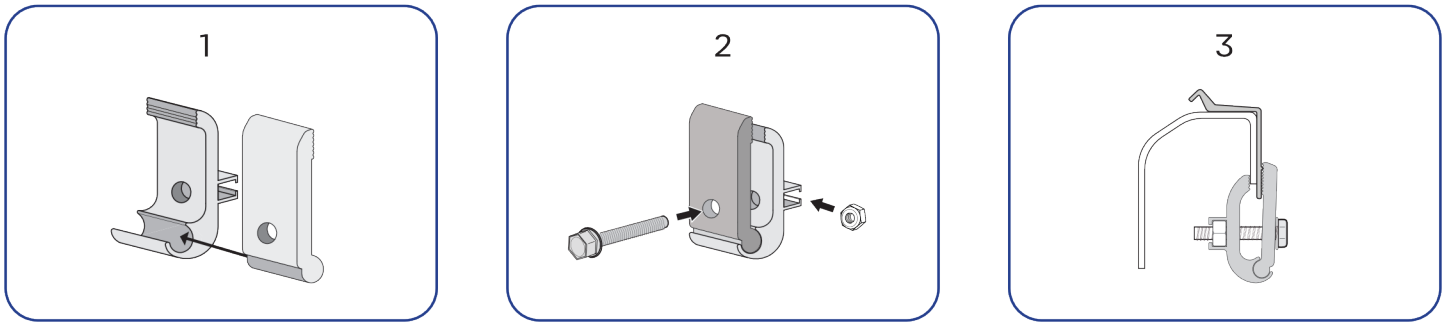



No Sport Bar Models

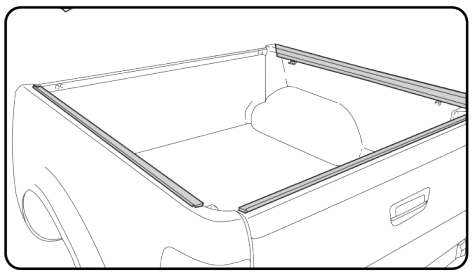

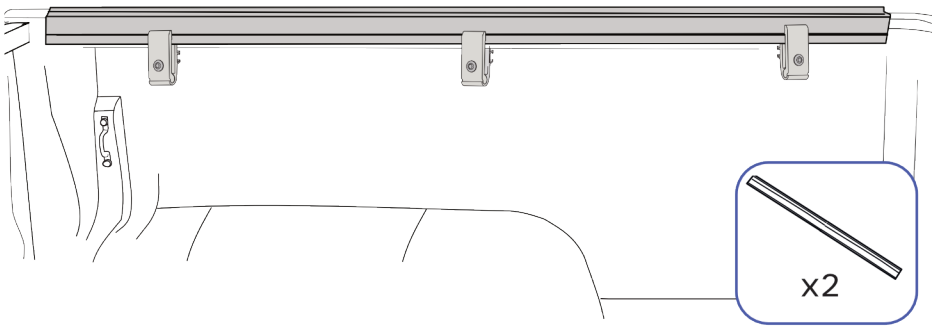



Headboard Models

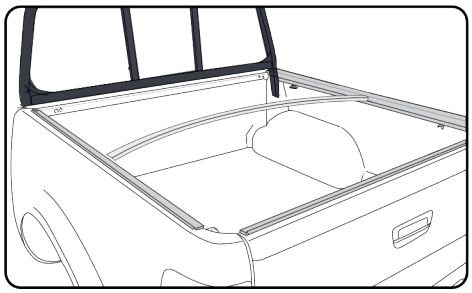

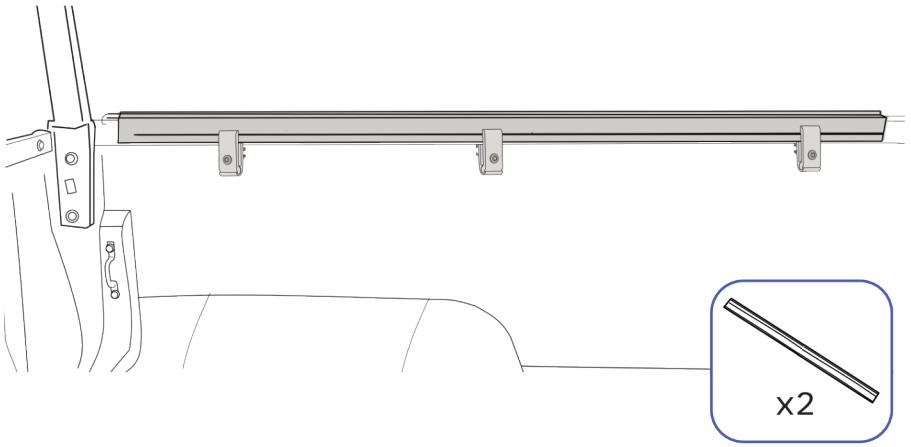

Sport Bar Models

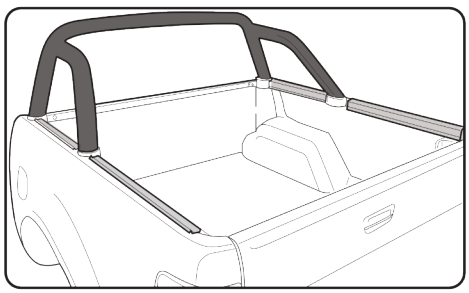


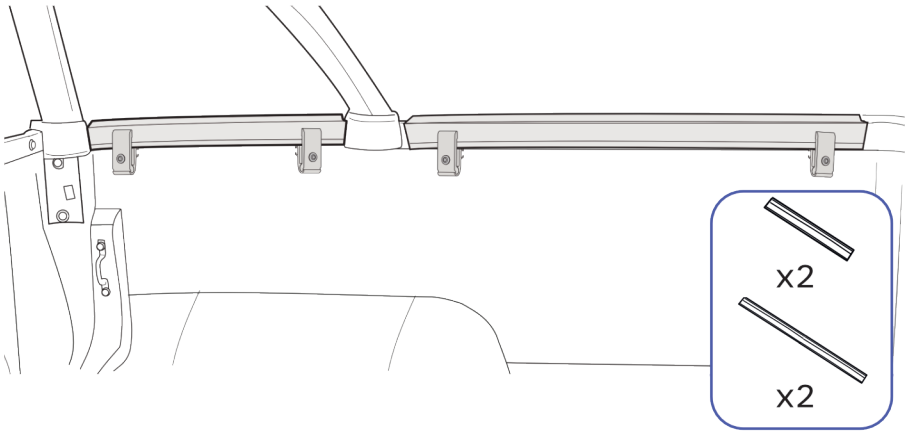

AUSSIE TONNEAUS


2. Attach Support Bar


2.1 Fit the Curved Oval tube to top of the the aluminium rails, in the centre of the Tub.

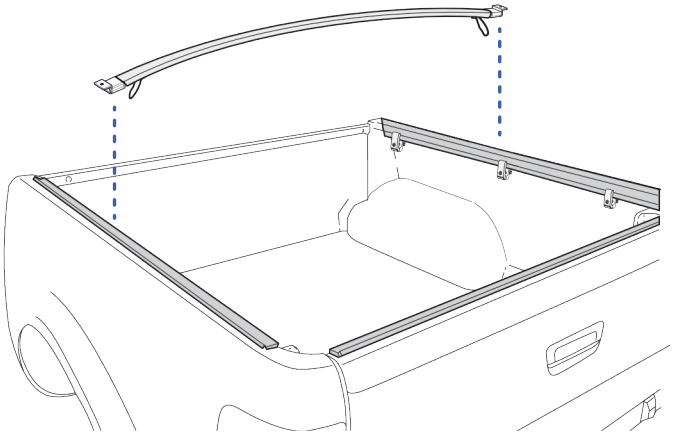




2.2 Wrap bunji cord around the centre clamp. This is to prevent support bar coming off.

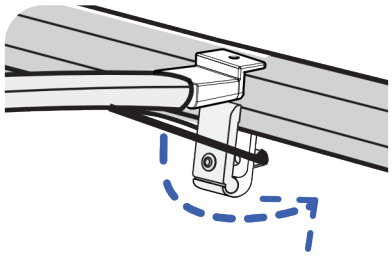

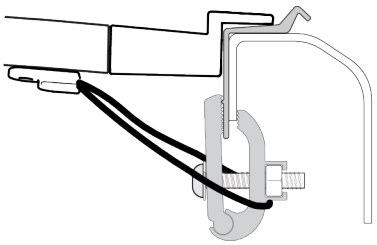


3. Prepare TailGate Rail

- Remove the inspection panel by unscrewing all 10 screws

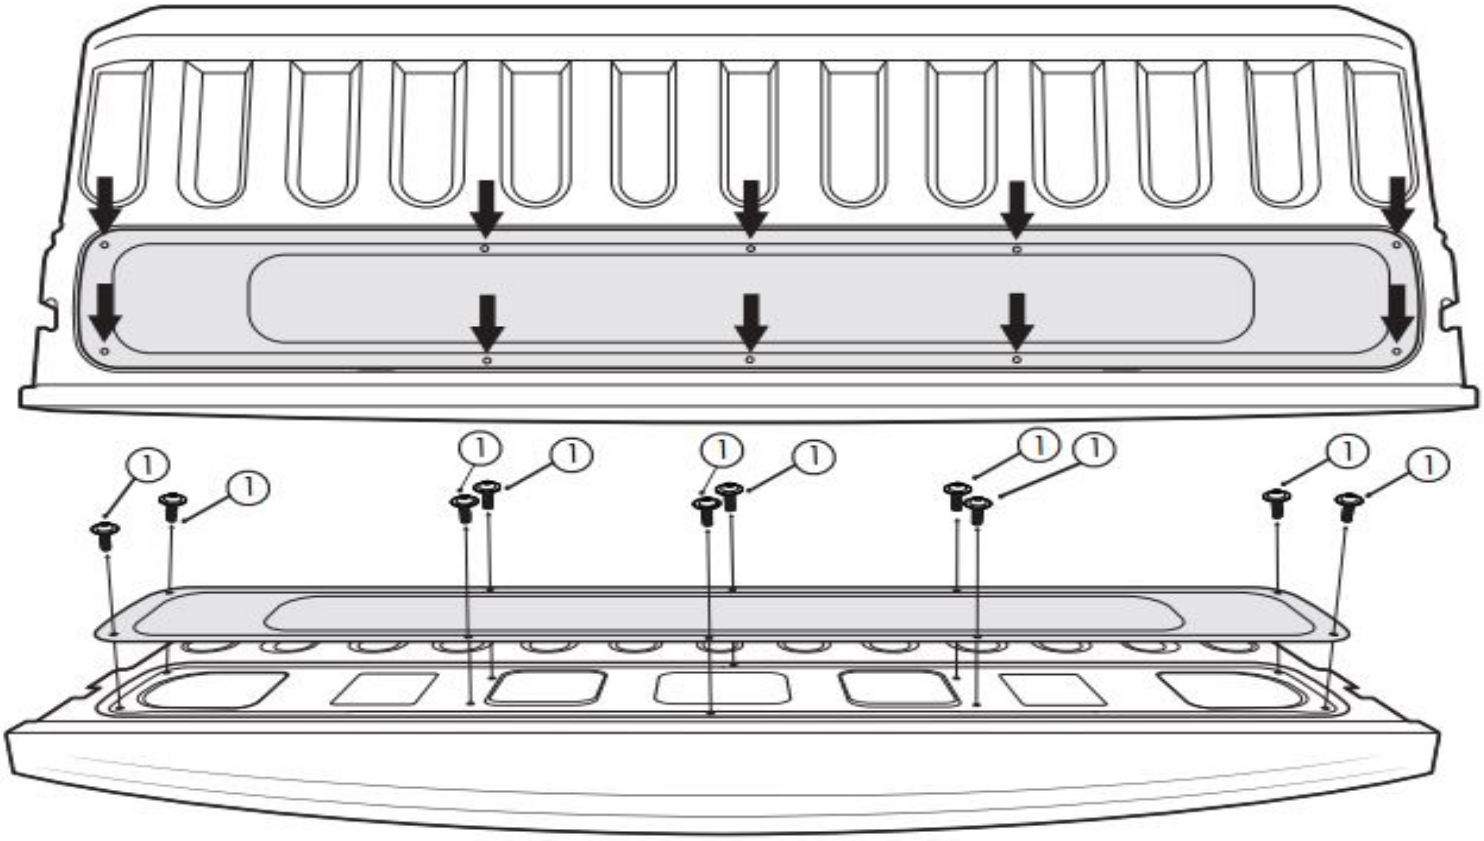


AUSSIE TONNEAUS

- Remove 4 plastic inserts shown below, from the top of the tailgate using the provided multi tool They may need to be drilled out.

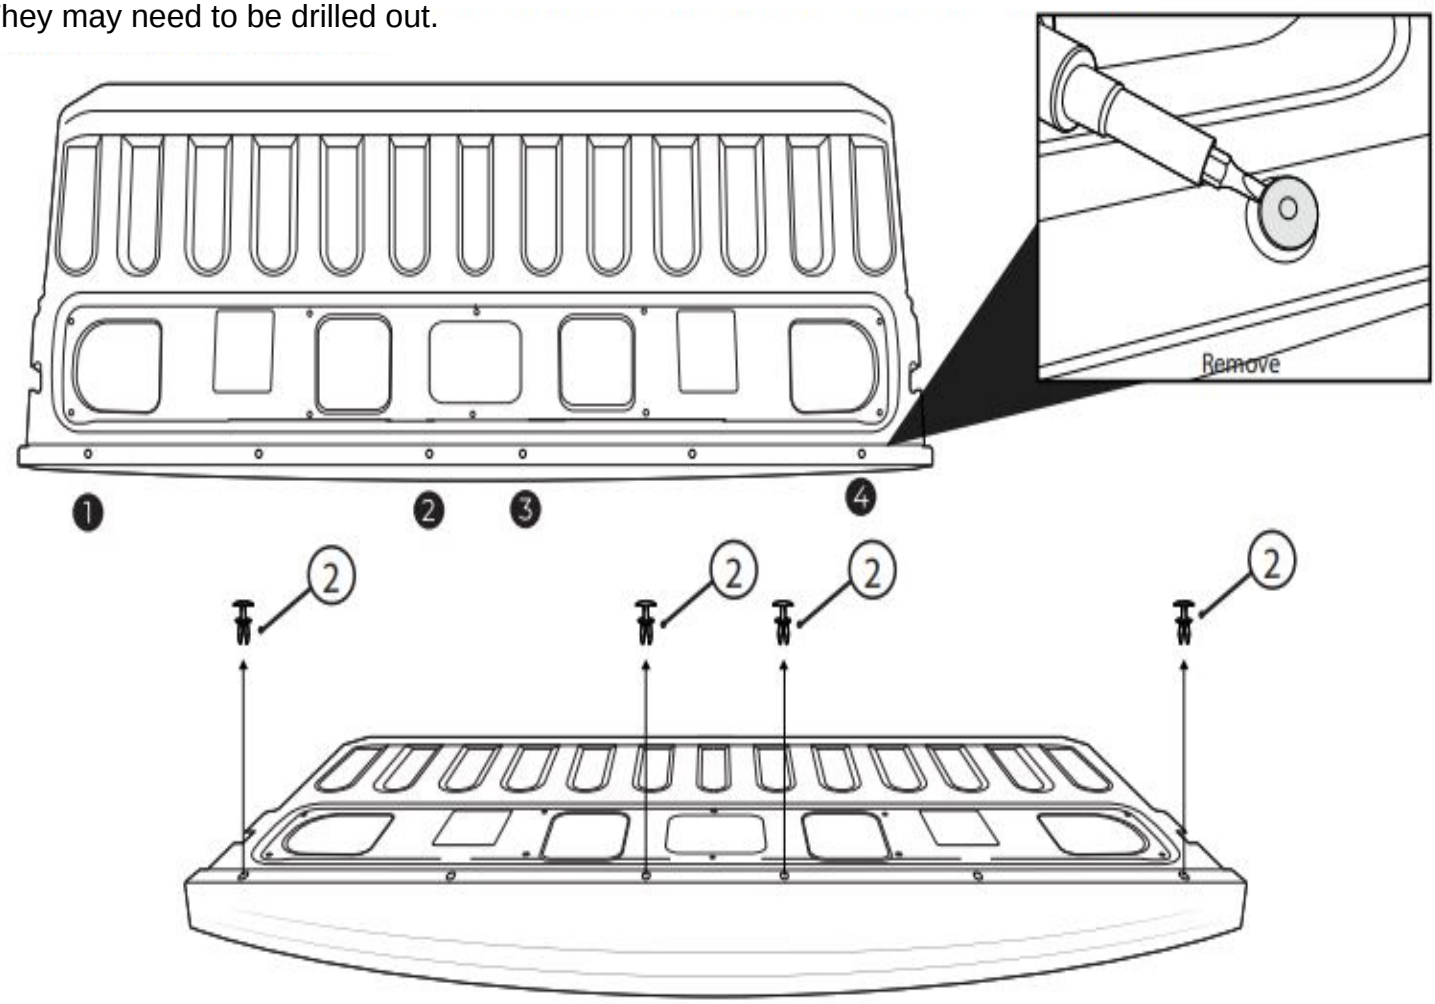

4. Attaching Tailgate Rail


- Fit the Tailgate Tail onto the tailgate. Line up the holes on Tailgate Rail with the holes in the tailgate.

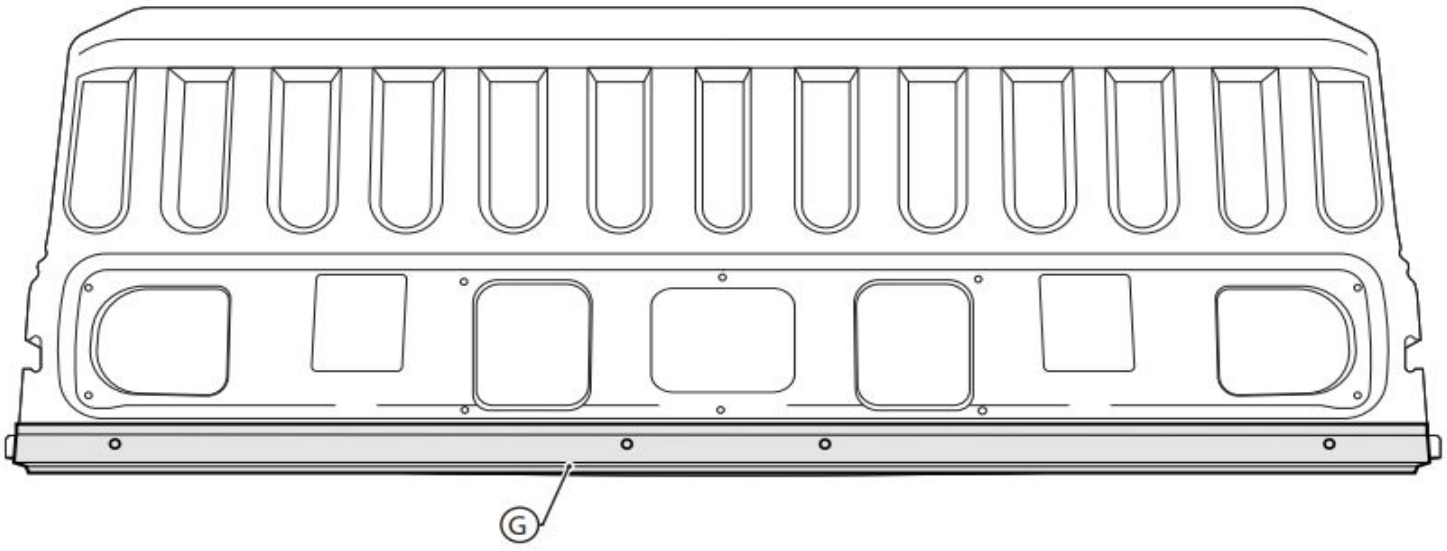


- Place a supplied M6 Bolt through all six of the tailgate rail holes.

- Next place a matching M6 Nylon Nut inside the tailgate
inspection panel, with a washer, attaching to each of the six M6 Bolts.

- Using a 4mm Hex Key and a 10mm Spanner, tighten up all six bolts ensuring the aluminium us secured to the tailgate.

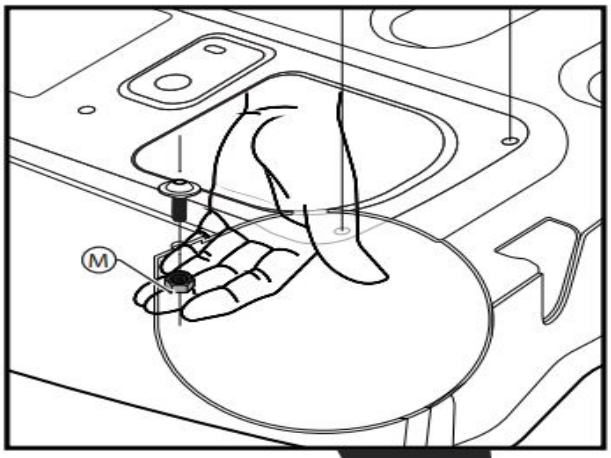


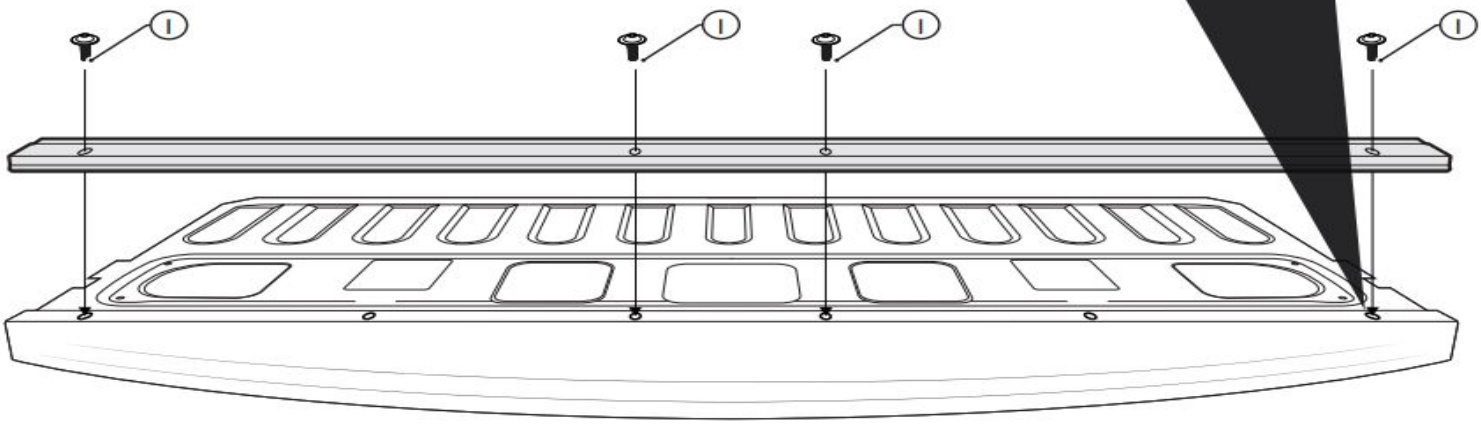


5. Fitting the cover


5.1. Attach the front of the cover to the front lip of the car.

5.2. Engage the back of the cover first, followed by the sides using the pull tabs (3).

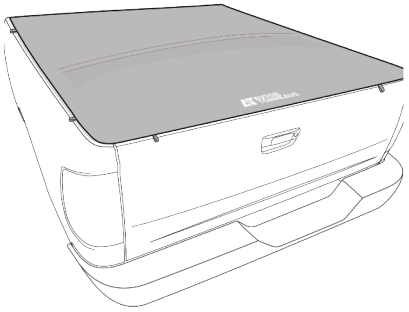


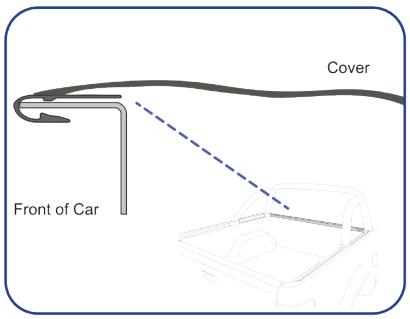

1

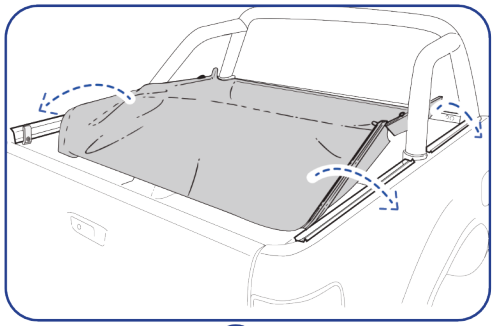


2

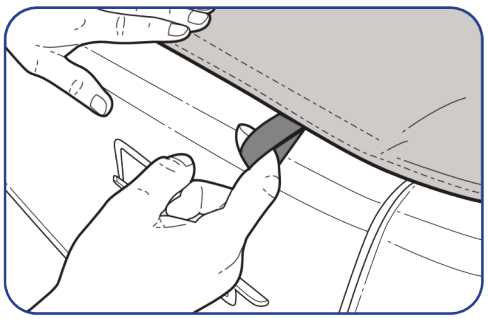


3

6. Cover tethering system


STEP 1

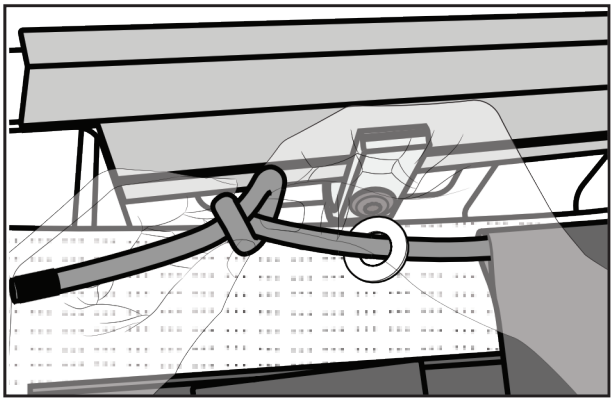


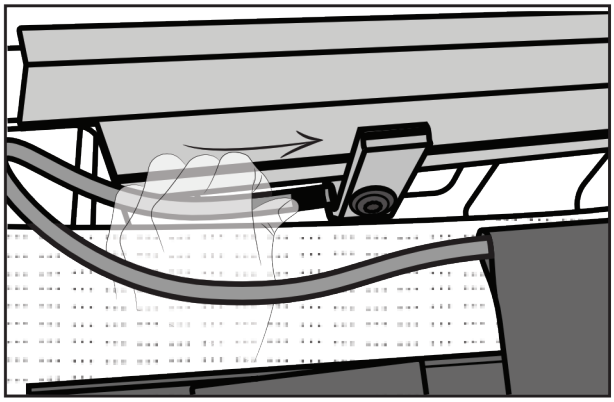

- Unclip the drivers side section of the cover from the aluminium rail.
- Untie the knot and remove the washer.
- Thread the rope through the clamp located near the front of the tub.


STEP 2

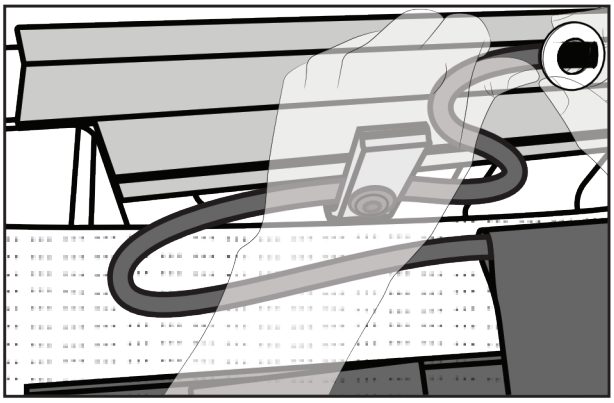


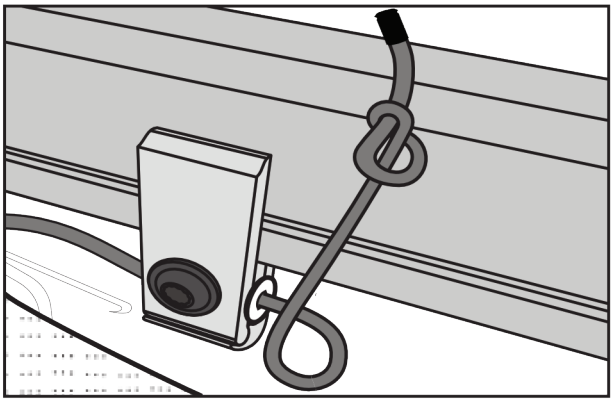

- Rethread the washer and tie the end of the rope in a knot.

STEP 3

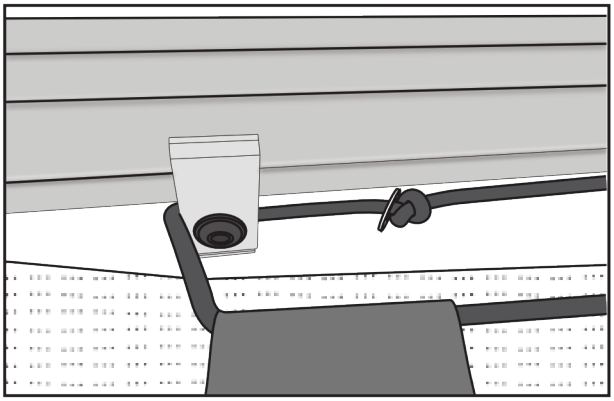

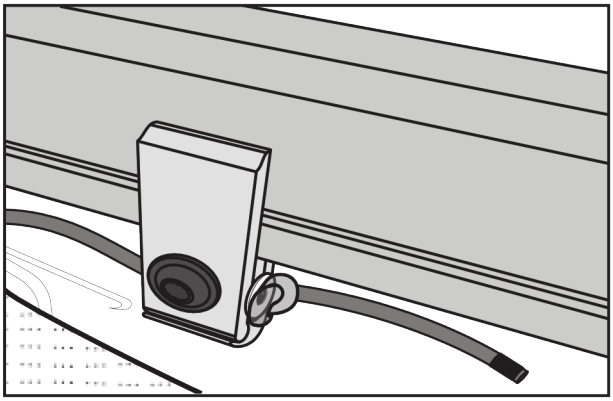


- With the washer in place the rope can not slip past the clamp.
- Repeat these steps for the passenger side.

Important

This product must be installed exactly as specified in this installation manual. Failure to do so may result in improper fit which can cause structural damage to the product and vehicle as well as serious accidents due to partial or complete loss of the product and void of warranty.

Appendix (Specified Cars)


Ram 1500

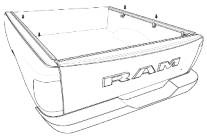

Tools Required


10mm Spanner

1. Attach the side Aluminium Rails

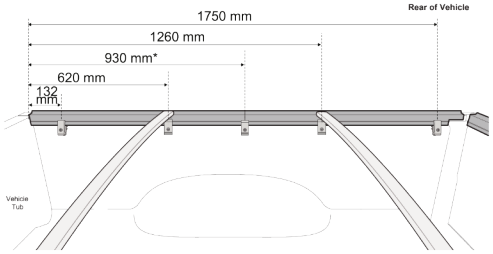


3. Prepare TailGate Rail

3.1 Remove Inspection panel.

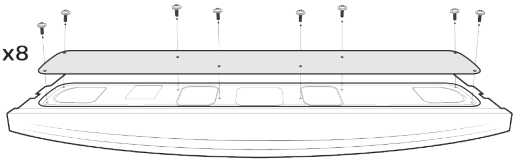


3.2 Remove the 6 plastic inserts from the top of inspection panel.

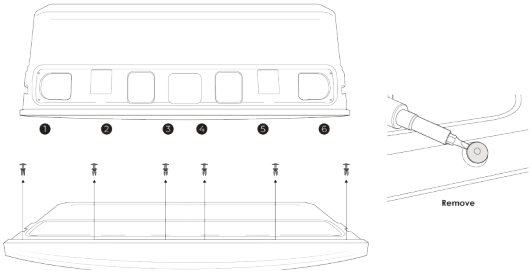


4. Attaching the Tailgate Rail


4.1 Remove the inspection panel by unscrewing the bolts.



4.2 Install the Tailgate Rail by screwing the bolts into the nuts provided. (Nuts can be fed through tailgate shown in the image below.

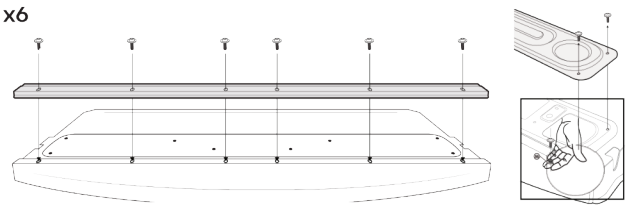

4.2 Re-install the inspection panel

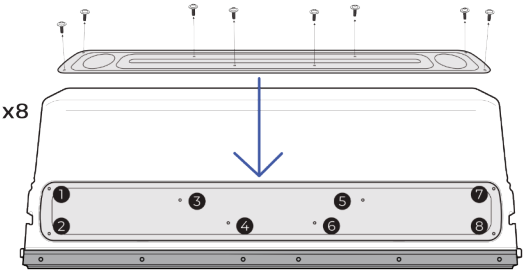

Mitsubishi MQ MR

(WITH SPORTBARS)




1. Attach the Front Rails


1.1 DO NOT take red tape off until sport bar bolts have be removed.
Remove and set aside the 4 bolts holding the front sports bar

Tools Required

13mm Spanner

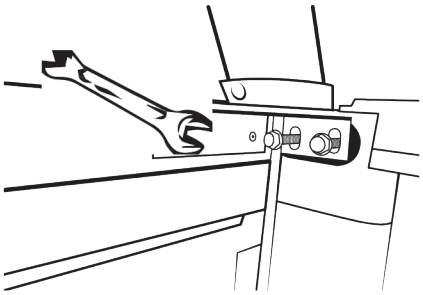

1.2 Place the Front Rail onto the top of the tub so the sports bar bolt holes align ensuring rail is flush with inside of tub.

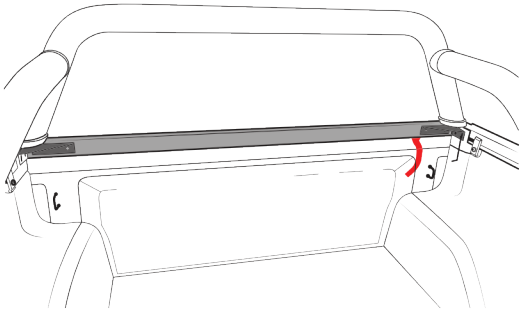

1.3 Carefully peel off the red double sided tape, and hold down firmly.


Mitsubishi MQ MR

(NO SPORTBARS)




1. Attach the Front Rails

1.10 On the Front Rail, measure 6 points vertically n-line with the 6 rivets already in place, 25mm from bottom of aluminium and drill each point using a 4mm drill bit.



1.11 Place the Front Rail on front top edge of the tub and now drill through each of the 6 drilled holes into the tub. Using the provided rivets, rivet the aluminium rail in place.

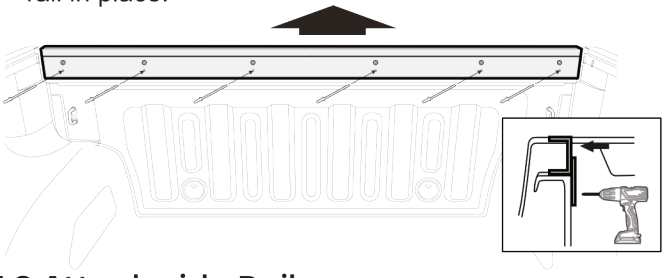

1.2 Attach side Rails

Refer back to page 2 and proceed with the instruction booklet. No sport bar = 3 clamps evenly spaced.

AUSSIE TONNEAUS

Appendix (Specified Cars)

VW Amarok Dual Cab


Tools Required



3mm Hex Key

1. Attach the Front rail Rails

1.1 Place front Rail onto the front edge of the tub & tighten side clamps (4).

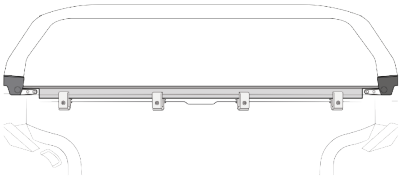

1.1 Attach side Rails

Repeat step 1 for the sides of the vehicle.
No sport bar = 3 clamps (evenly spaced).
Sport Bars = 2 clamps per rail

