
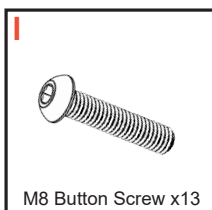
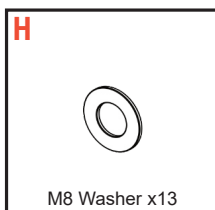
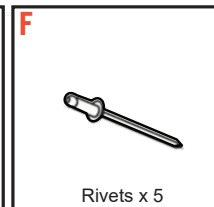
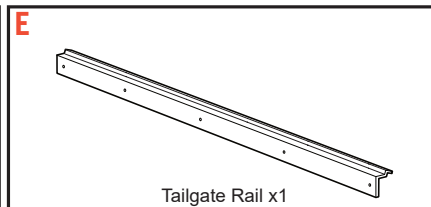
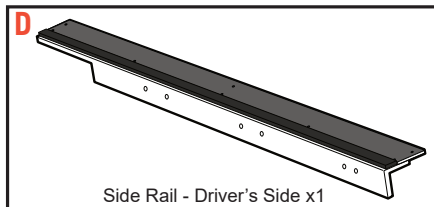
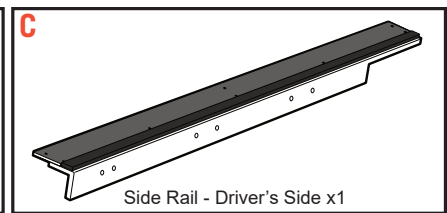
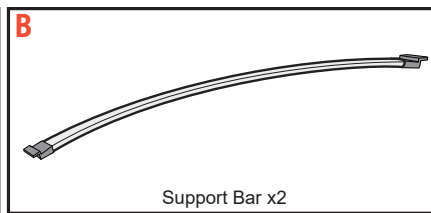


JAC HUNTER PHEV

Part Number: ATR11930

INSTALLATION GUIDE

- PARTS SUPPLIED

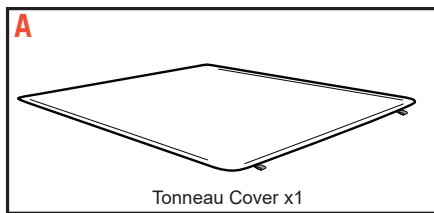


- SAFETY NOTES

- Ensure that appropriate Personal Protective Equipment is used.
- During the accessory fitment, ensure all Australian automotive and dealership safety practices are followed.
- Always refer to vehicle's workshop manual when removing components.




– FINAL ASSEMBLY –

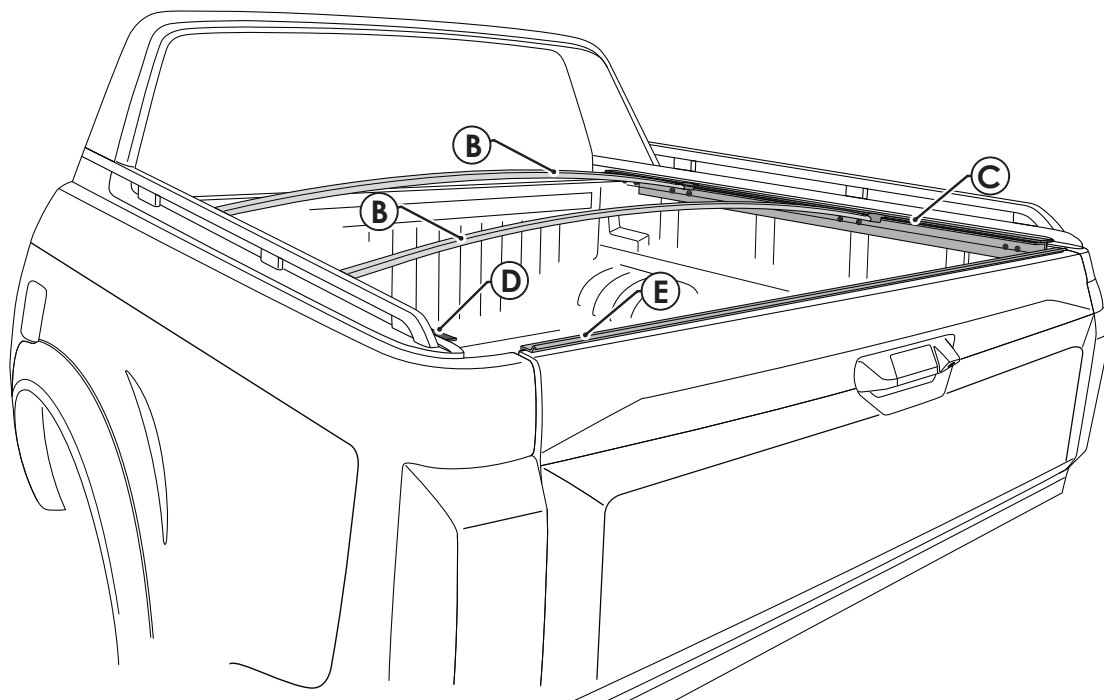


1

ATTACH SIDE RAILS

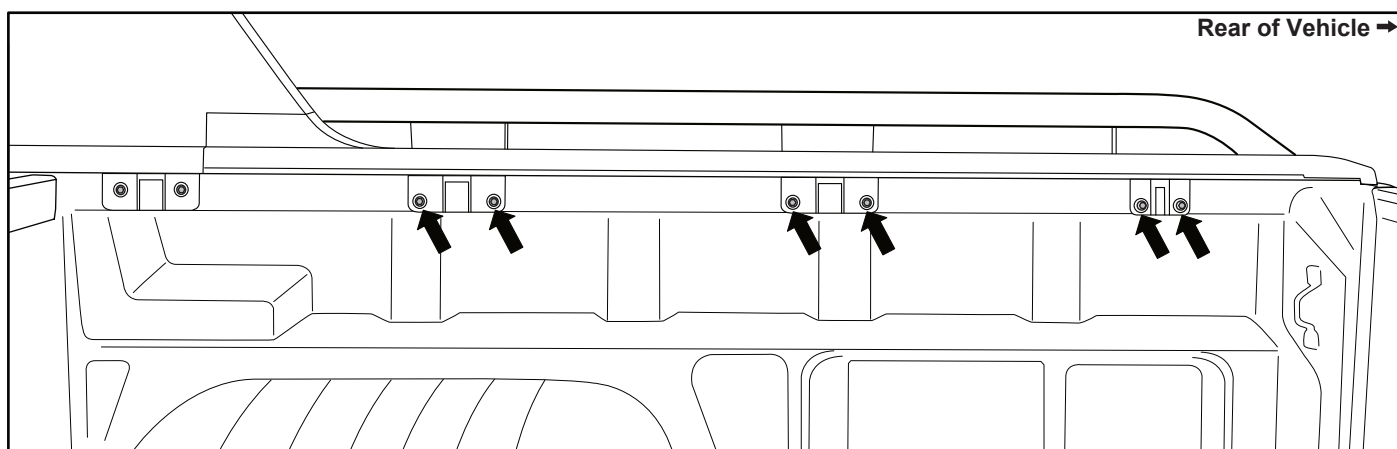



- Remove the 6 factory screws pointed above with a torx bit.

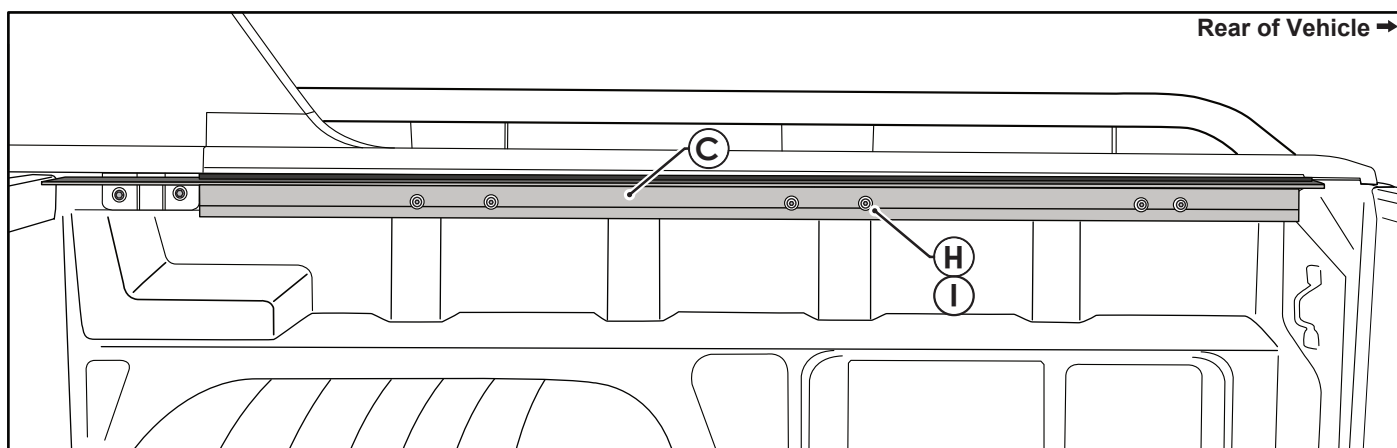

- Attach Side Rail **C** using the M8 Washers **H** x6 and M8 Button Screws **I** x6
- Repeat for other side for Side Rail **D**.

2


FIT THE SUPPORT BARS

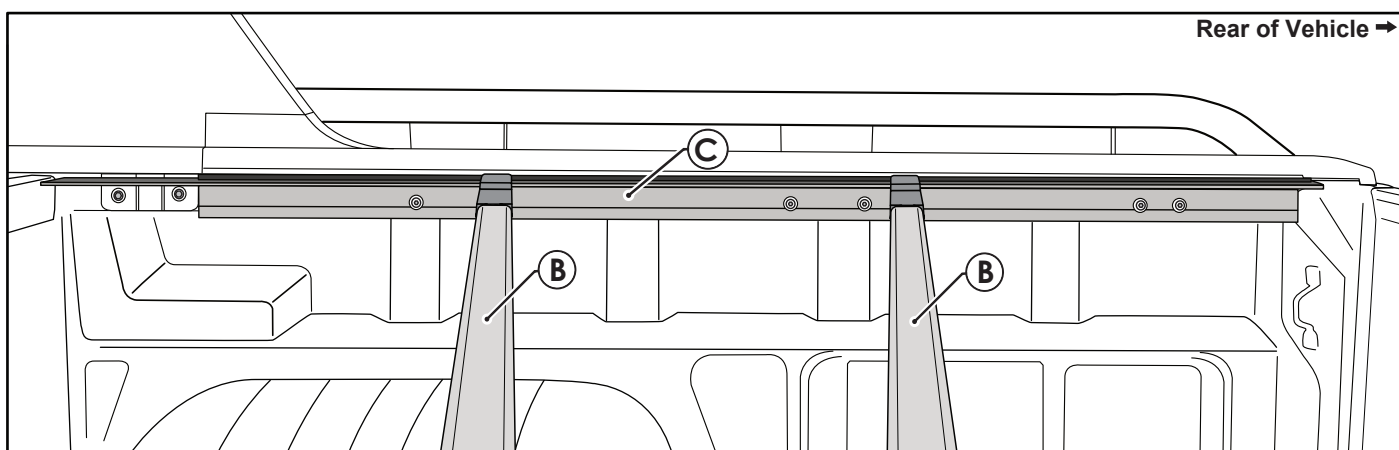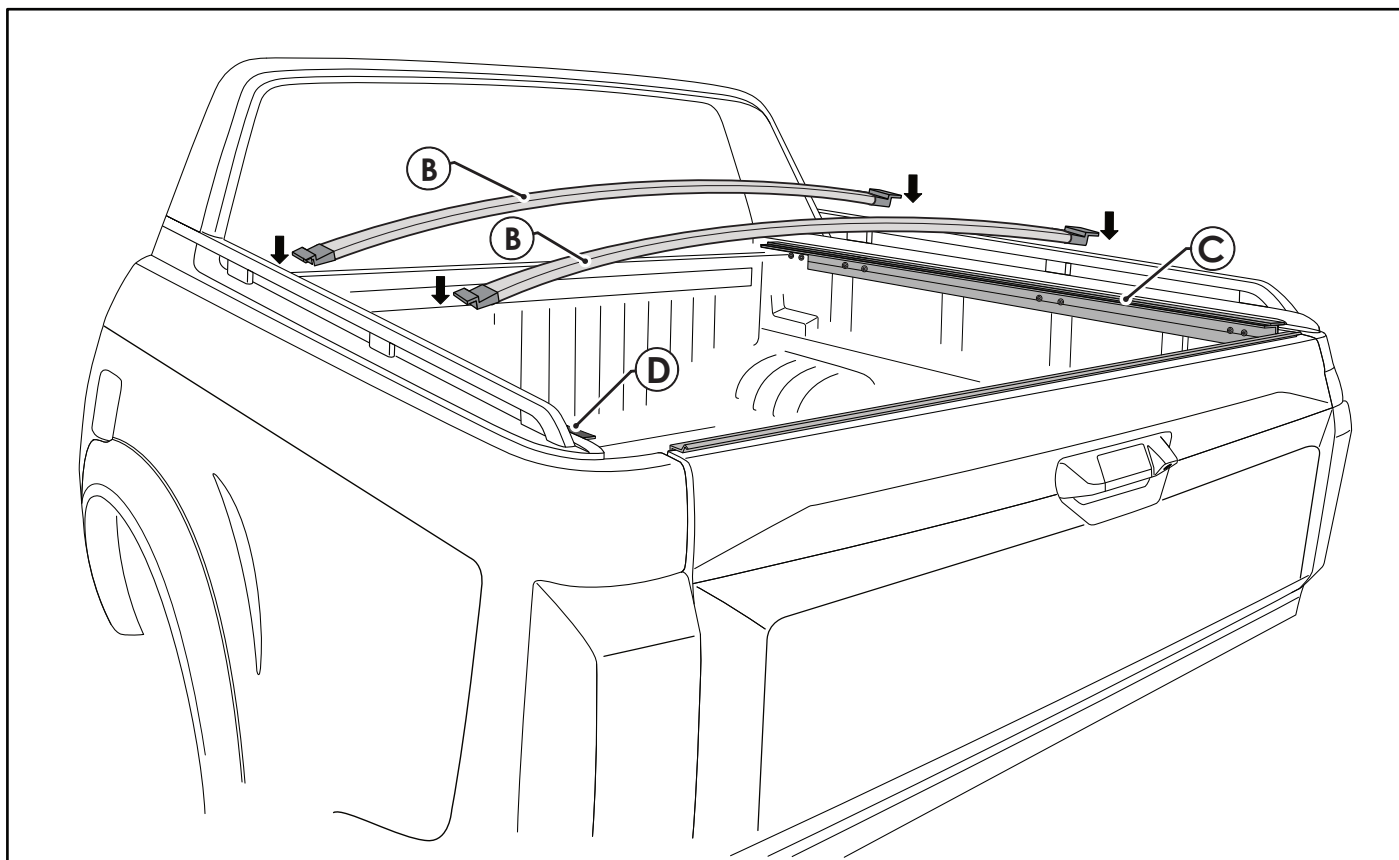

- Place the two Support Bars (B) with even distance from the middle of tub as shown above. Velcro on both ends of the Support Bars makes it easy to adjust the distance between them along the velcro surface on the Side Rails (C) and (D). Adjust them as required.
- Make sure the two support bars are seated in place with good velcro contact by pushing lightly on the centre of the two Support Bars (B).

3

DRILL, RIVET AND FIT THE TAILGATE RAIL

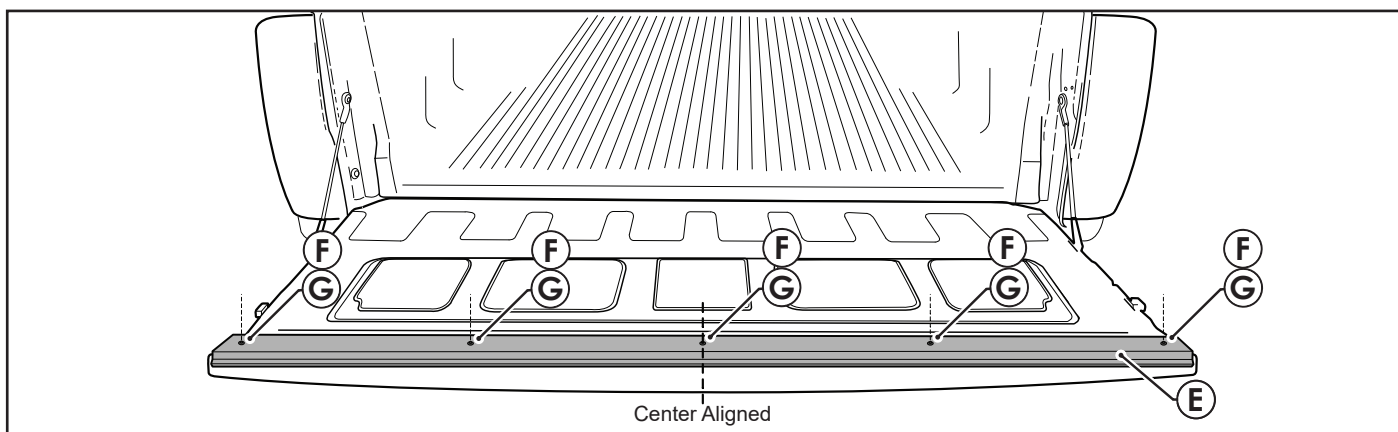

- Remove the red tape from back of the Tailgate Rail (E). Then stick the Tailgate Rail (E) centrally onto the tailgate. Using a 4.1mm drill bit, Drill a hole 30mm from the edge on each side and the rest as per image spacing them evenly.

Apply Rust Inhibitor (G) into drilled holes and then rivet the Tailgate Rail to the tailgate using the Rivets (F) x5 and a riveter.

4


FIT THE TONNEAU COVER

- Attach the plastic J Retainer on front of the Tonneau Cover (A) to front lip of the Ute tub located behind the cab window.
- Engage the back of the cover first, followed by the Velcro on sides.

Note: Ensure the Support Bars are fitted underneath the Tonneau Cover to prevent water ingress and to keep the cover tight.



Use the pull tabs to assist whenever you open or close your cover.

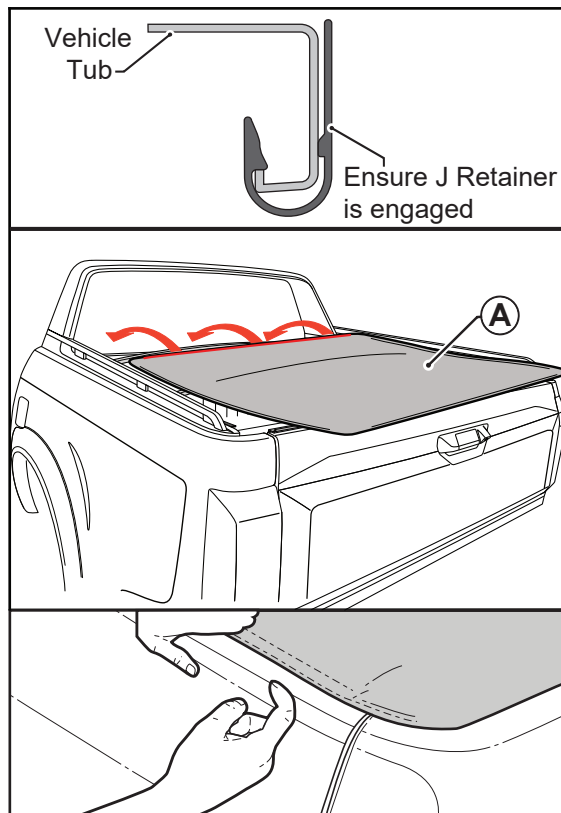

You have completed the installation!